


**Soter HLL
Installation Manual**

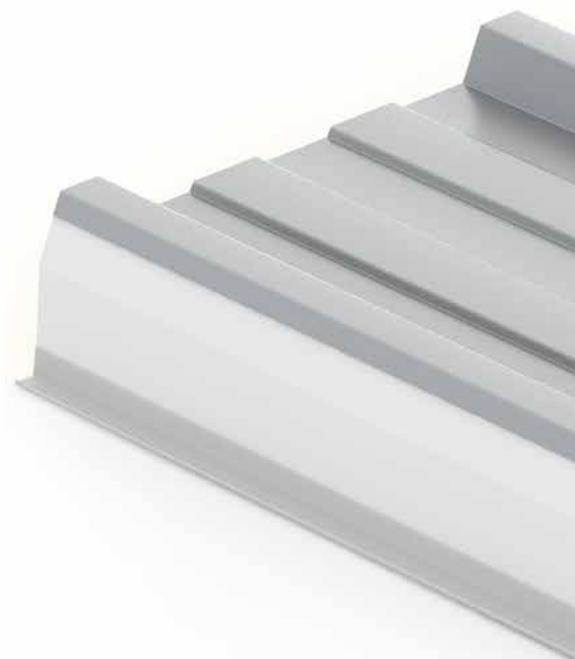

Soter HLL Installation Manual

1.0	Introduction	3
2.0	Approved installers	4
3.0	Conformity	4
4.0	Design	4
4.1	Work Restraint	5
4.2	Fall Arrest	6
4.2.1	Free-Fall Clearances	7
4.2.2	Anti-Pendulum Posts/Swing Falls	8
5.0	Fixing methods/Anchor types	9
5.1	Trapezoidal Sheet Types	11
5.2	Standing Seam Sheet Types	12
5.3	Flat Roof Types	13
6.0	System Design Fundamentals & Limitations	15
6.1	High Load and Intermediate Posts	15
6.2	Calculation Package and Loadings	15
6.3	Maximum Spacings	16
6.4	Maximum System Lengths	16
6.5	Starting and stopping a system on a single post/closed loop	16
6.6	T-off on a single post/throw	16
6.7	45 degree turns and hip details	16
6.8	Crossing ridges, valleys, and distance from end of sheets	16
6.9	Systems to Standing Seam Roofs	17
7.0	Installation	17
7.1	Tool List	17
7.2	Component List	18
7.3	Post Installation	24
7.3.1	Flat Roof	24
7.3.1.1	Gravity Toggle	24
7.3.1.2	Stud and Resin	26
7.3.1.3	Sleeve and Fastener	28
7.3.1.4	Concrete Screw	29
7.3.2	Trapezoidal Roof sheets	31
7.3.3	Standing seam roof sheets	32
7.4	Component installation	34
7.5	Wire measure and cutting	35
7.6	Termination Swaging/crimping	36
7.7	Tensioning	38
7.8	System Tagging	39
8.0	Annual Maintenance/Recertification	40
9.0	O&M Manual/User instructions	42
10.0	Warranty	42
11.0	Testing standards	43
12.0	References	43



Soter HLL Installation Manual

1.0 Introduction

This guide has been compiled to ensure the correct installation of Soter HLL systems is adhered to at all times.


The installer should have previous HLL system installation knowledge, design understanding, or have taken part in Soter HLL training.

It is important that the installer fully understands this guide before commencement of Soter installation on site.

Soter HLL Systems are designed to act as a fall prevention method, or that of a means of minimising the consequences of a fall should it occur.

Only trained personnel should be involved in the design, correct installation, and recertification of HLL systems. Failure to follow this guide could put people's lives at risk.

It is imperative that the correct components are used for the specific application, and any doubts should be resolved by seeking guidance from SFS Fall Protection.

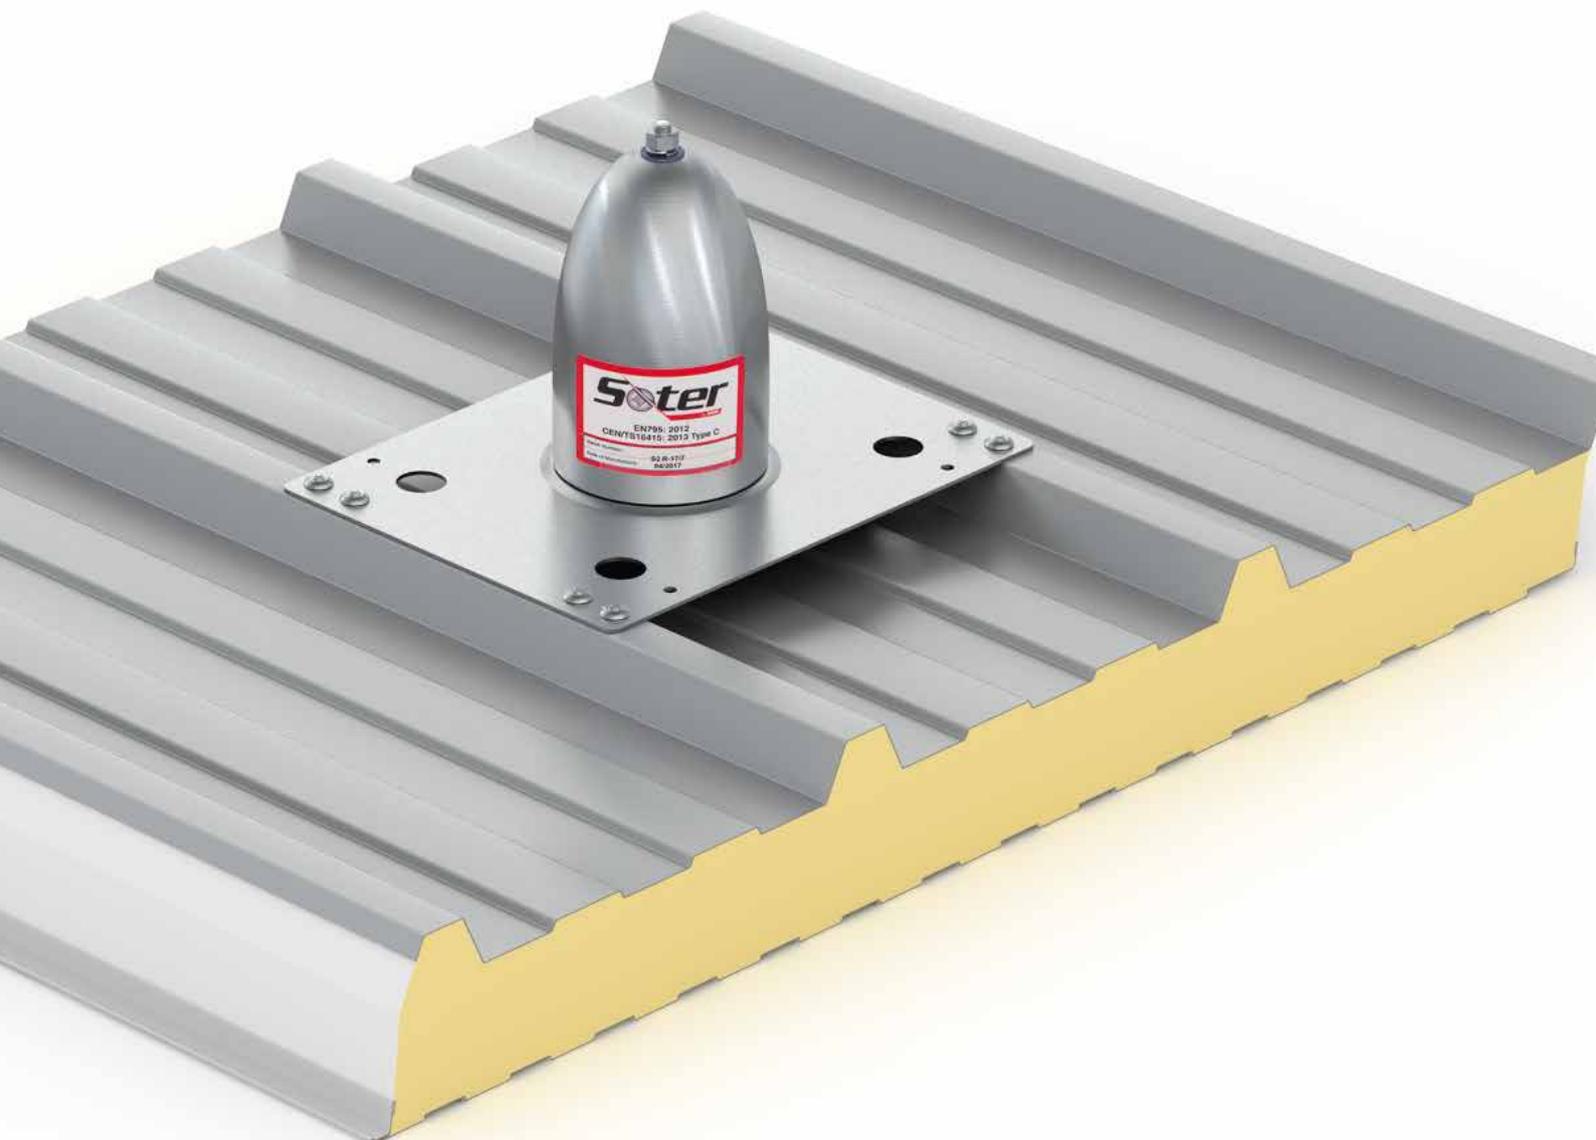

Soter HLL Installation Manual

2.0 Approved Installers

Only competent installers trained by SFS are certified to carry out installation and re-certification of Soter HLL systems.

Approved installers should ensure their personnel on site are competent and trained to the standards expected by SFS.



3.0 Conformity

The Soter HLL system is a series of top fixed shock absorbing posts anchored to the outer roof skin, joined through a series of components to create a system using a 7x7 8mm wire cable. Tested and approved by SATRA to EN795: 2012, CEN: TS16415 multi-user and ACR Magenta guidelines.

The 'system' refers to posts, components and wire, none of which should be substituted by non-approved components, modified or altered without the prior consent of SFS. Systems should not be dismantled or tampered with, as doing so could alter the performance of the system and invalidate its certification which could result in serious injury or death.



4.0 Design

HLL System design should only be carried out by competent persons.

When considering a safe system design, the designer must firstly understand the requirements of the user/or need for roof access. This can be gathered from many sources, the safest method should be prioritised without the prejudice of a cost saving.

Full considerations to be understood:

- Reason for access/purpose of the system
- Access point and method
- No. of users required per system
- Full roof plans and elevations
- Roof substrate and condition
- Fixing method

The system designer should always follow the Hierarchy of Fall Protection. Restraint systems should be the preferred option and only as last resort should an arrest system be offered.

All systems must be capable of arresting a fall under EN795:2012 'foreseeable misuse', however it is best practice to keep a user in restraint to prevent any possibility of a fall occurring.

Soter HLL Installation Manual

4.1 Work Restraint

Work restraint systems are the safest method of HLL system design. Keeping a user in restraint removes the possibility of fall occurring. The users path, and what they have access to can be dictated/controlled.

Keeping a user in restraint is dictated by the relationship of two key distances;

- Lanyard length (A)
- Position of the system and distance away from fall hazard (B), *see figure adjacent and on page 6



If the achievable distance between position of line and fall hazard varies on the system route, the lesser distance and therefore lanyard length should be preferred before any variable lanyard lengths/multiple lanyards are proposed.

The general spacing from system to roof edge/fall hazard is 2.30m based on a typical lanyard length of 1.85m.

Fall Hazards can be roof edges, roof lights or other fragile roof areas such as windows/glass.

Main advantages of Work Restraint systems;

- No possibility of a fall
- No need for any rescue plan
- Adjacent buildings/lower level roofs and fall clearances do not need to be factored
- Minimal system user training required

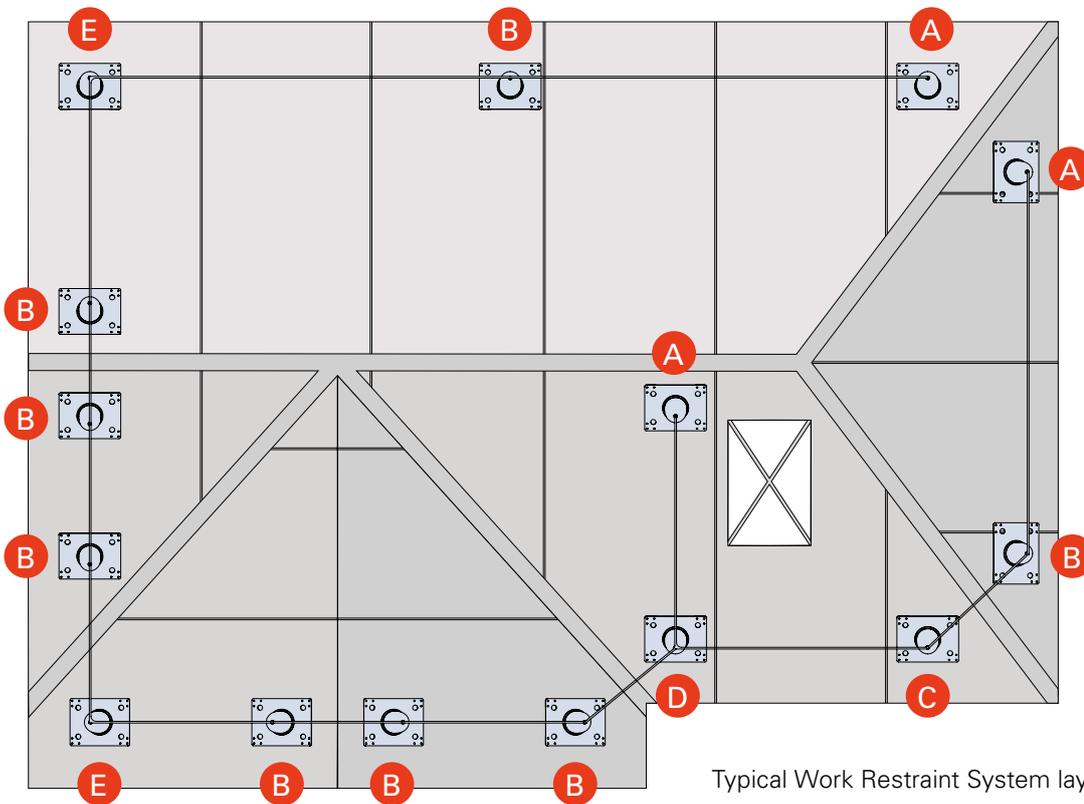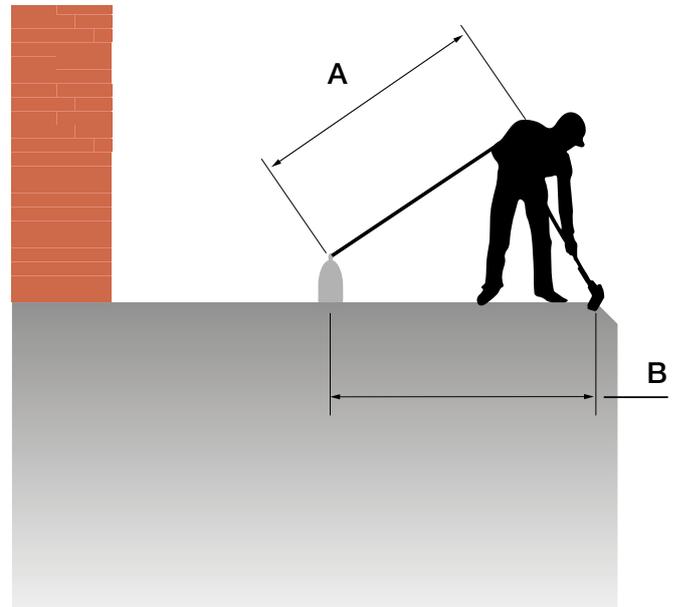

- Key:**
- A – Soter HL Start/End post with female M10/Universal
 - B – Soter R Intermediate post with intermediate bracket
 - C – Soter HL with intermediate bracket
 - D – Soter HL T-Off with 2 hole plate and intermediate bracket
 - E – Soter R Corner with corner kit/solid corner

Typical Work Restraint System layout

Soter HLL Installation Manual

4.2 Fall Arrest

When a work restraint system cannot be feasibly offered, then a fall arrest system can then be considered.

Fall arrest systems are designed to 'limit the consequences of a fall should it occur'.

The Soter HLL system will arrest a users' fall, only if the required fall clearance has been allowed.

Fall clearances must be factored in when a fall arrest system is designed, considering the following factors;



- Building height
- Free fall distance from roof edges
 - To the ground
 - Lower level roofs/adjacent buildings
- Free fall distance through fragile roof areas/roof lights/canopies etc.

Although fall arrest systems are often employed to give a user full roof access, they come with major disadvantages, such as;

- They do not stop a fall from height occurring as the user has flexibility of PPE lengths.
- They can only be used on buildings with the required free fall clearance from all fall hazards including through roof lights.
- A full rescue plan must be in place to return the user to safety, often this is overlooked.

- The users must be trained so they can use extra PPE equipment safely including extended rope and grab devices and anti-pendulum/swing posts.

*Soter systems should not be designed to arrest on standing seam roof sheets due to the weakness of the connection between clip and sheet which will not give required arrest figures.

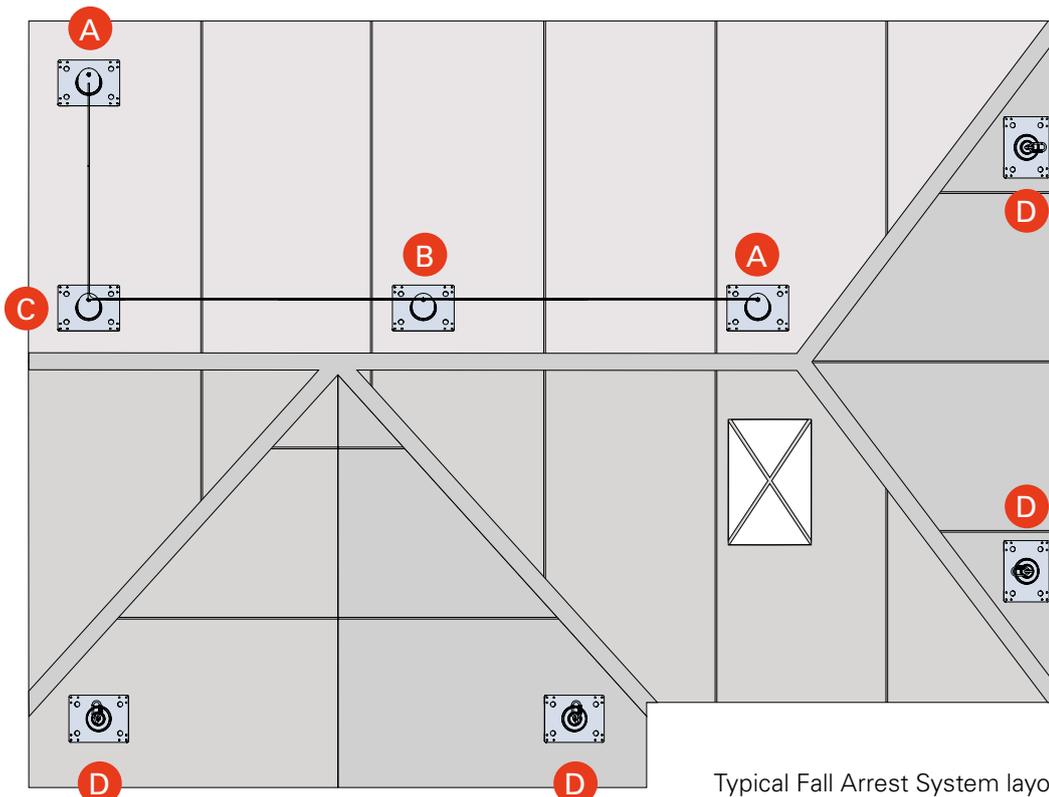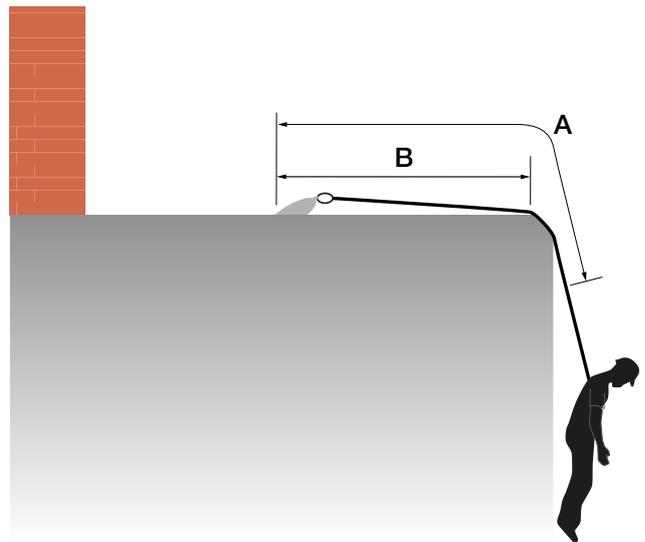

Typical Fall Arrest System layout

Key:

- A – Soter HL Start/End post with female M10/Universal
- B – Soter R Intermediate post with intermediate bracket
- C – Soter HL Corner with corner kit/solid corner
- D – Soter anti-pendulum/swing post

Soter HLL Installation Manual

4.2.1 Free-Fall Clearances

Free fall clearances are often overlooked when a fall arrest system is designed.



It's imperative they are calculated using a calculation programme by the manufacturer, to prove that if a fall was to occur, the distances required for the system to effectively arrest the users fall can be assured.

System deflection and wire elongation is calculated using the Soter calculation package, taking into account system length, post spacing and maximum span length, and the number of users.

This calculation package is available to all approved Soter installers. SFS can also make design calculations in house on request.

Once system deflection and wire elongation is known, this distance can be added to the following measurements to calculate a free fall clearance distance:

- Users Height (A)
 - Lanyard Length (B)
 - Deployed shock absorber length (C)
 - Safety Factor (D)
- = Minimum free fall clearance required (Z)

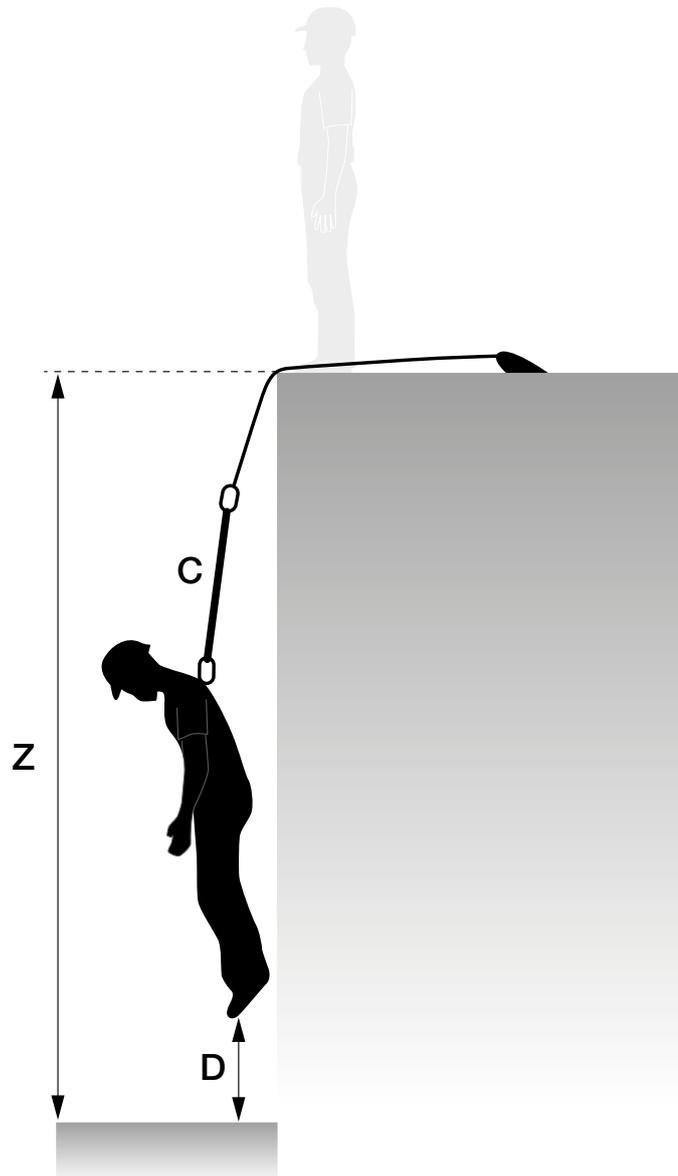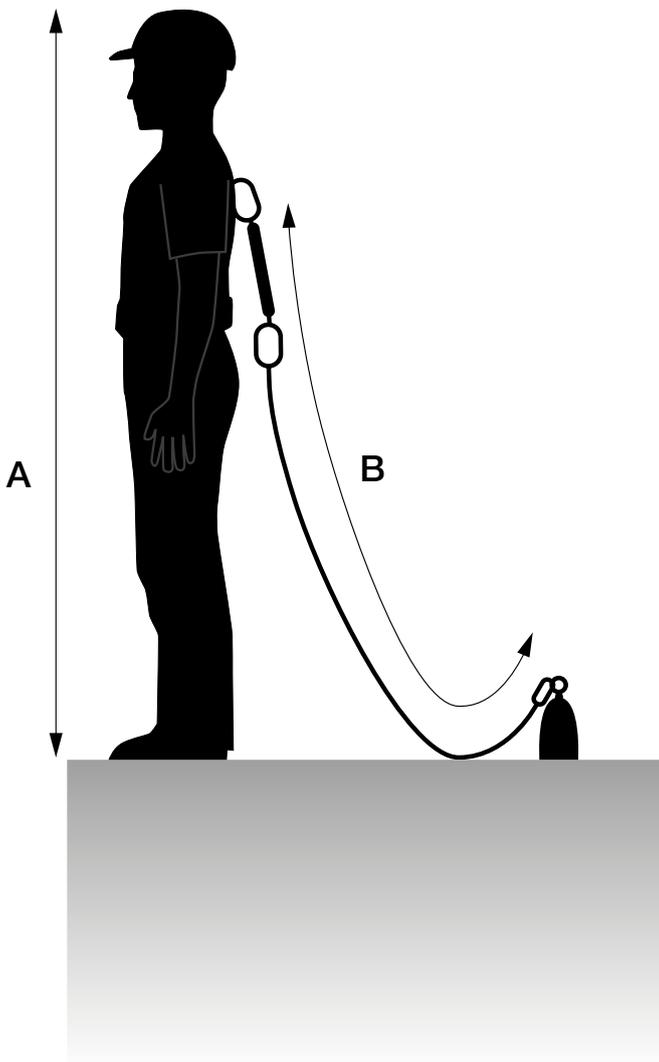

Soter HLL Installation Manual

4.2.2 Anti-Pendulum Posts/Swing Falls

Anti-pendulum/swing posts must be installed to protect exposed gable ends on roofs with fall arrest systems where the user is required to use an extended rope and grab.

Figure 1 below shows a user at the full extent of his rope at the eaves of the roof close to the exposed gable end. As the extended length of the rope is longer than the building height, should the user fall from the gable end, they would have inadequate free-fall clearance for the system to work effectively.

There is also another issue that the lanyard moving across the roof edge can generate a slicing motion.

Installing anti-pendulum posts reduces the possible 'swing' motion to a manageable length also ensuring the user can be fully arrested by the system.

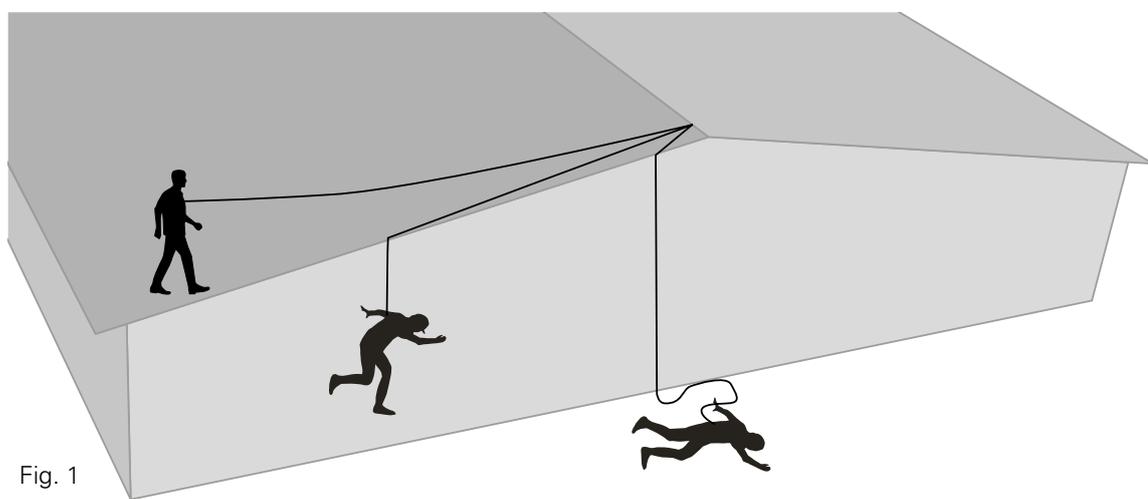


Fig. 1

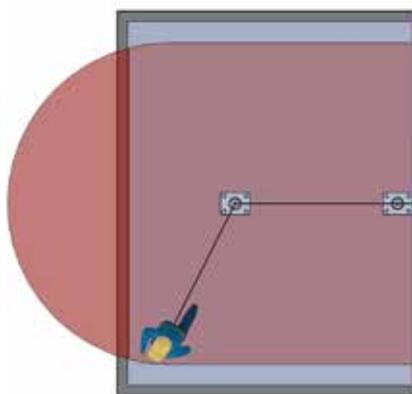


Fig. 2


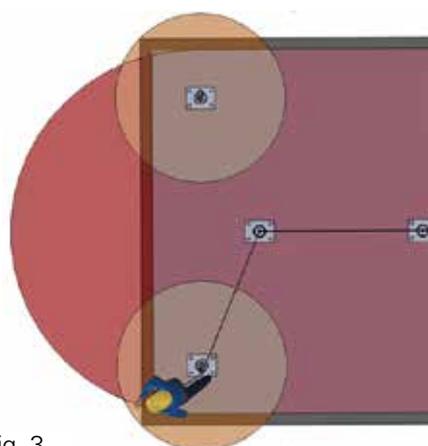


Fig. 3

Fig. 2 shows the potential swing fall and the inaccessible areas without the use of anti-pendulum posts. Fig. 3 shows how the swing fall potential can be limited with the use of anti-pendulum posts.

5.0 Fixing Methods/Anchor Types

The Soter HLL system is fitted to roof structures using a baseplate and fixing method suitable for the roof type. Once the roof type is known a base plate and fixing method can be selected. And as the system is modular, posts, then components can be added.

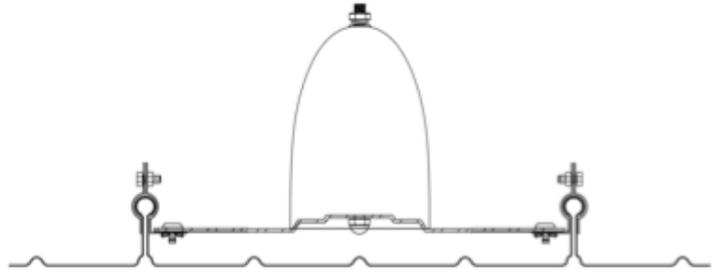

Selecting the correct base plate:

Each base plate has a central raised dome, complete with a welded M10 female boss, to which the relevant Soter post can be turned securely into. This weld is completely weather tight. Base plates to be used on metal roofing applications come complete with pads on the underside to seal the base plate to the roof sheet crown.

Each base plate depending on application will be fixed with either a specified number of rivets for Trapezoidal roof sheets, stainless steel gravity toggles, studding and resin, sleeves and fasteners and concrete screws for flat roofs, or a suitable non-penetrative seam clamp for standing seam roofs. Base plates are also available PVC coated to aid a direct weld of a suitable membrane roof covering if suitable.

Standard Base Plate


Universal Base Plate

Iso-Tak Base Plate




**Soter HLL
Installation Manual**


Standard Base Plate

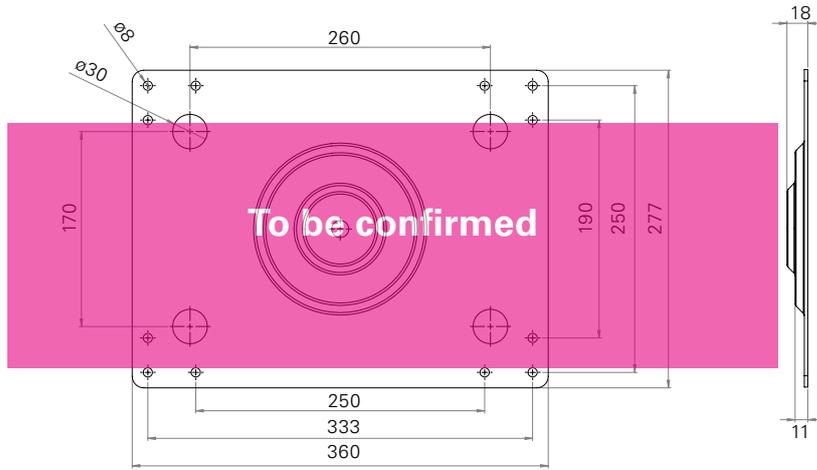

Universal Base Plate

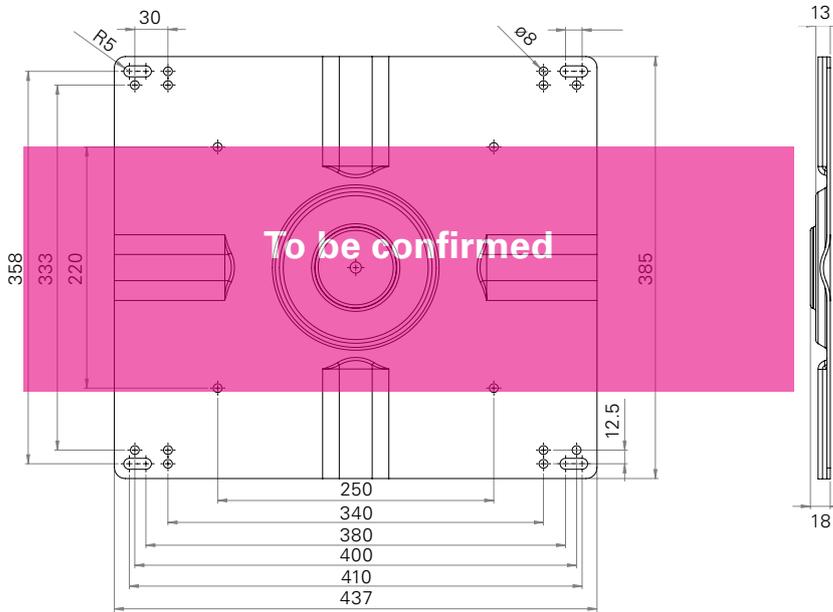

Iso-Tak Base Plate


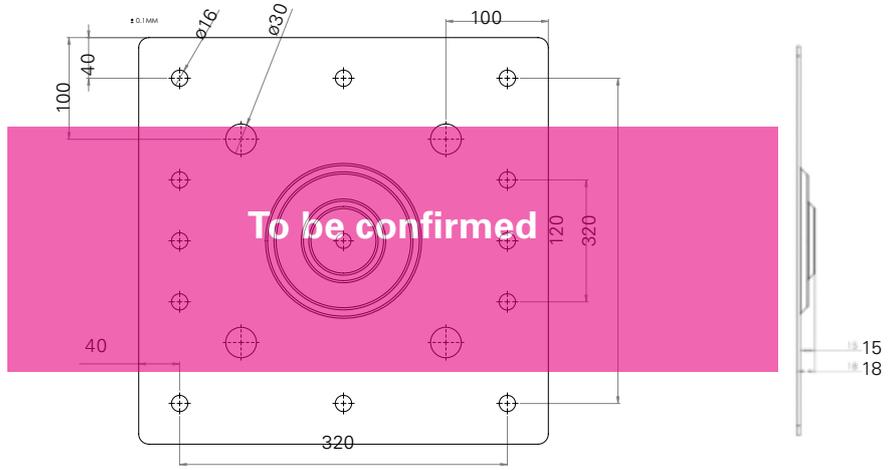


Soter HLL Installation Manual

5.1 Trapezoidal Sheet Types



Composite panel:

> 0.5mm outer sheet thickness
Fixed with 8 no. 7.7mm Bulb-Tite rivets

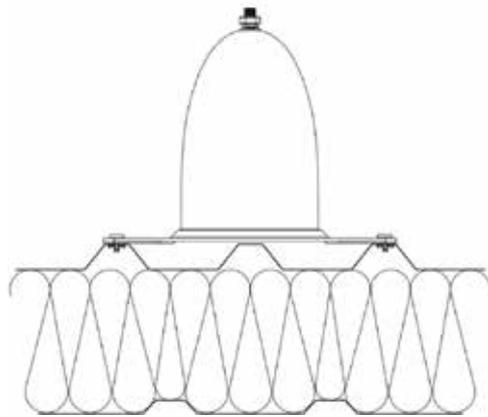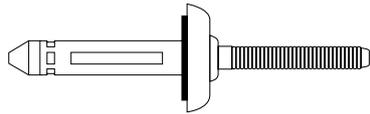

Twin Skin BUOS:


> 0.7mm sheet thickness
Fixed with 4 no. 7.7mm Bulb-Tite rivets

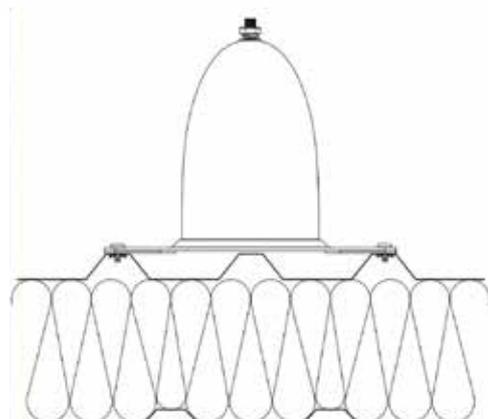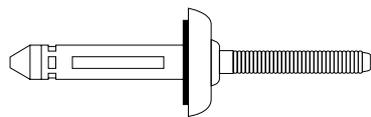

**Soter HLL
Installation Manual**

5.2 Standing Seam Sheet Types

Fixed using 4 no. seam clamps suitable for fold type

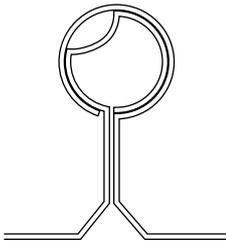




Bulb Type Standing Seam



Non-Penetrative Soter Seam Clamp





S5-Z Seam Clamp

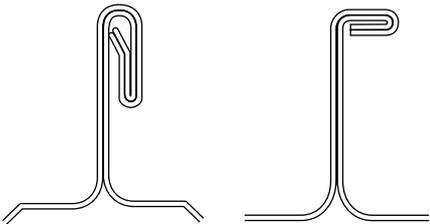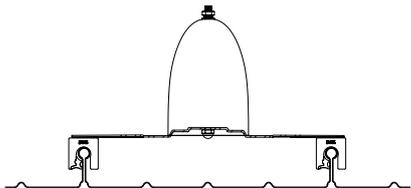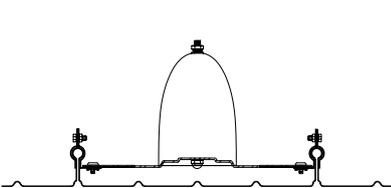

Traditional Standing Seam




S5-U Seam Clamp

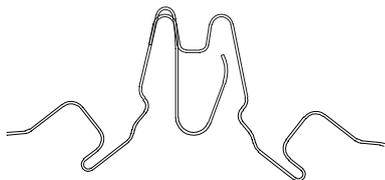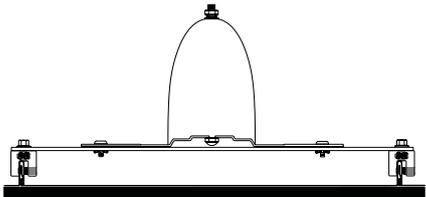

Rivertherm Standing Seam



Non-penetrative Soter Rivertherm Seam Clamp



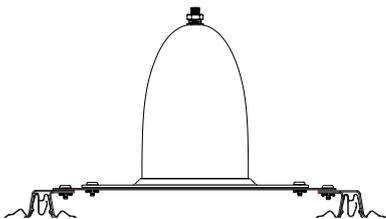


Soter HLL Installation Manual

5.3 Flat Roof Types





18mm Ply /OSB Board – 0.7mm Metal deck

Using 4 no. gravity toggles

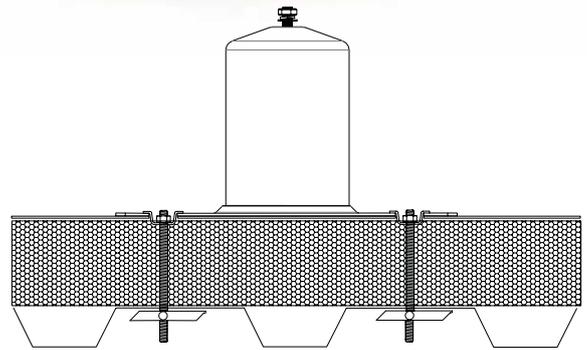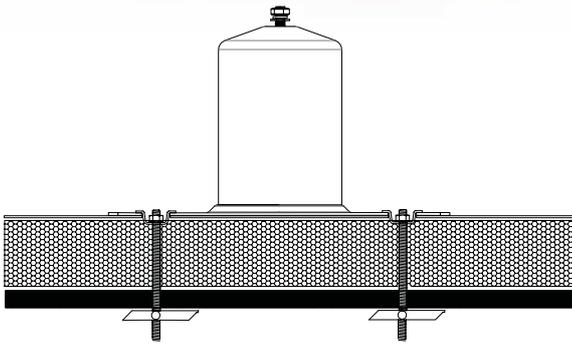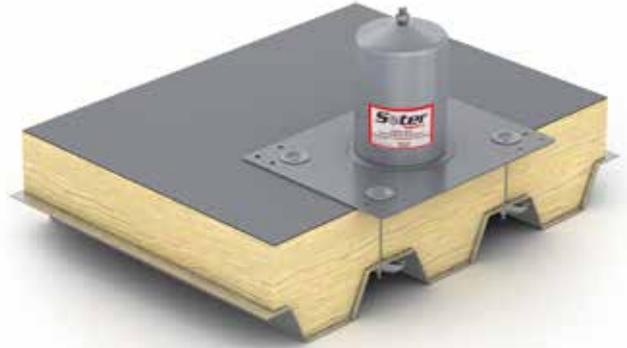

18mm Ply /OSB Board – 0.7mm Metal deck

Using 8 no. PA sleeves and BS screws

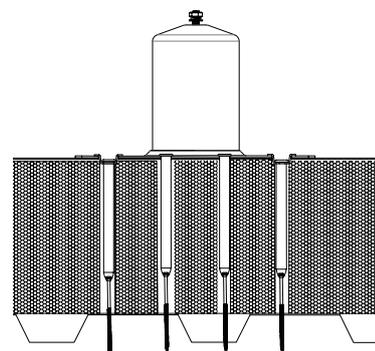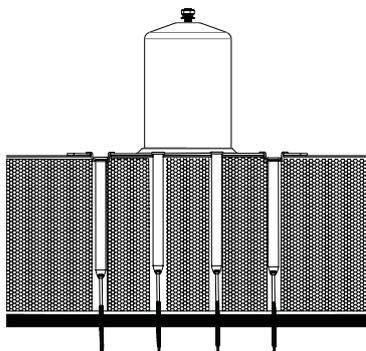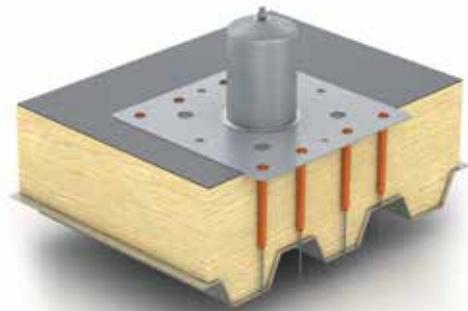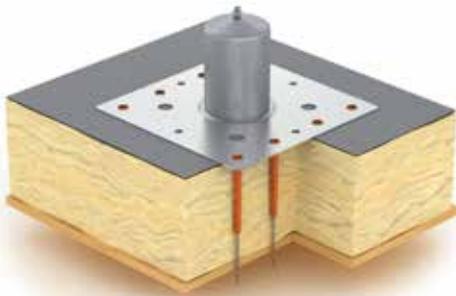


Soter HLL Installation Manual

5.3 Flat Roof Types



Concrete Deck

Using 4 no. >8mm stainless studs and resin

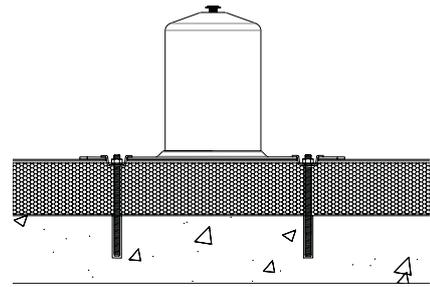



Concrete Deck

Using 4 no. concrete screws

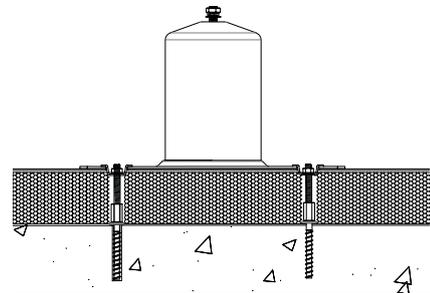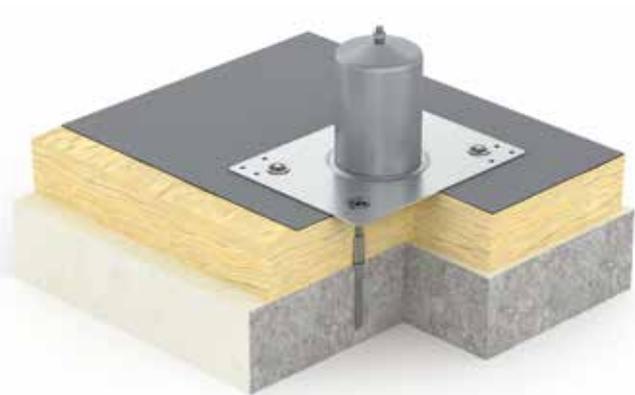

Concrete Deck

Using 8 no. PA Sleeve's and TI Screws

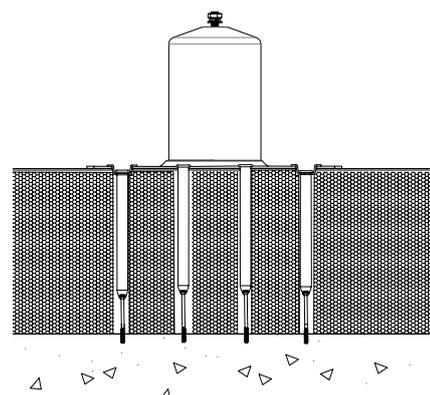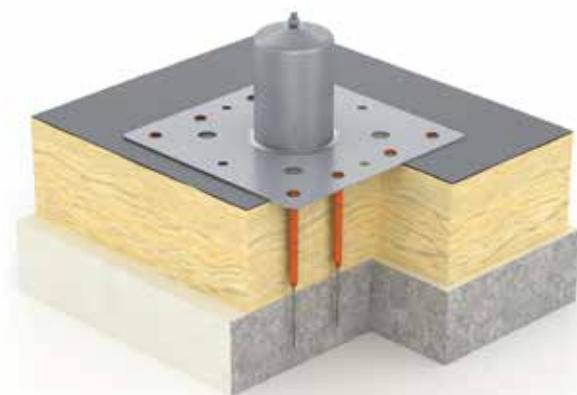

6.0 System Design Fundamentals & Limitations


6.1 High Load and Intermediate

The Soter HLL system is created using two post types.

The High Load post contains a shock absorbing element to reduce the load in the event of a fall that is sent back to the roof substrate. When falls occur, the majority of load generated is sent back to the ends of each straight run, these can be starts and ends of straight lines, or corners on systems which turn. For this reason, it is imperative that Soter High Load posts are fitted at the start, end, and corners of systems- therefore every straight run has a shock absorbing post at start and end.

The Soter Intermediate post has a smaller shock absorbing element inside, which is designed to tip over and get into shear as quickly as possible, and overall- reduce system deflection.

As both posts at first look very similar, we have designed them so that the incorrect post cannot be fixed in the wrong location. The High Load post has a silver washer, and M10 stud. The intermediate post has a red washer with a M12 stud. Combining this logic to our fittings- those components which are used at the starts, corners and ends of systems are drilled M10, so if an intermediate post was placed in the wrong location, the component would not fit onto it.

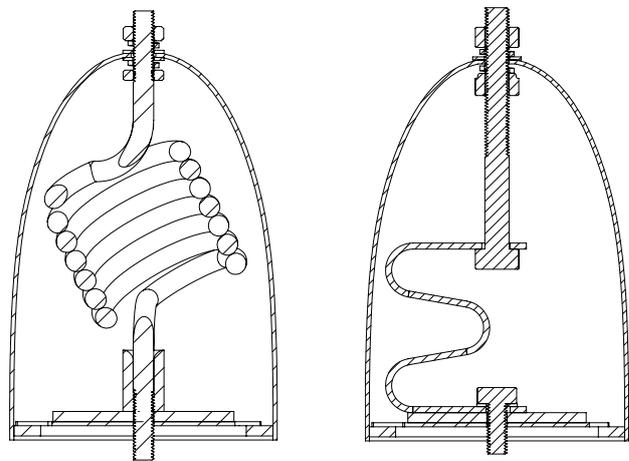

6.2 Calculation Package and Loadings

Soter comes complete with its own calculation package allowing for calculations to be made to give end loadings, system deflections and other detailed information assisting the system designer to propose a system that's fit for purpose. This calculation package can be used on Soter shock absorbing posts, and components with in-line shock absorbers for systems fitted to rigid/fabricated posts, walls, and rigid structures.

SFS Line System Configurator

Input data

Maximum span between anchors (S_a) 10 m

Total system length (L_s) 50 m

Initial tension in cable (T_0) 800 N

Mass of falling person (m) 100 kg

Wire construction CSA B

Solution

Elongation of unloaded half span (E_h) 5.024651 m

Maximum tension at anchor (F_a) 5.39 kN

Maximum deflection at impact point (D) 2.0769 m

Notes

8mm 1x19 wire rope construction = A

8mm 7x7 wire rope construction = B

8mm 7x19 wire rope construction = C

System Details (Enter your results below from the solutions given on the right. A typical example is given in grey)

<i>Solution data</i>	Length (m)	Max F_a (kN)	Max F_m (kN)	Deflection D (mm)
System total length	100	N/A	N/A	N/A
Systems shortest span	2	5.12	5.17	1.39
Systems longest span	10	5.39	4.00	2.71
Other spans of interest	8	5.30	4.74	2.67

Soter HLL Installation Manual

6.3 Maximum Spacings

To ensure both end loadings and system deflections are kept to a minimum, the Soter HLL system has been designed and tested to a maximum span of 10m between 2 posts on all roof types.

Each straight run of a system should have a HL post at the start and end with intermediate posts evenly spaced along its length, not exceeding the maximum 10m stated spacing.

6.4 Maximum System Lengths

Soter systems can support straight system lengths up to a maximum of 250m, however this figure reduces once you add a corner, and further for every subsequent corner added. This is mainly down to the static loading that a corner post is subjected to under system tensioning. The more corners, the more load each corner post must support in two directions which can cause post lean.

Please refer to guidelines adjacent, however this should be assessed at the installers discretion on site.

Number of Corners	Max. System Length
Straight run	250m
1	175m
2-4	150m
5+	125m



*It is advised that systems of long lengths, or those that have multiple turns, have a tensioning termination at both ends of the system, so that the tension can be pulled into the line from both ends.

6.5 Starting and Stopping a System on a Single Post/Closed Loop

Soter has been designed and tested to allow a system to be started and finished on the same post creating a closed loop on system lengths up to a maximum of 100m. This can be created by using a Universal End Anchor with a Female M10 ring, or a 3-hole corner plate.

6.6 T-Off on a Single Post/Throw

You can also create a T-Off/Throw where one HL post can act as both the start/end of a system and the intermediate of another. Only the stated number of users can be on the system as a whole, not per line. This is created by using a 2-hole plate and intermediate bracket.

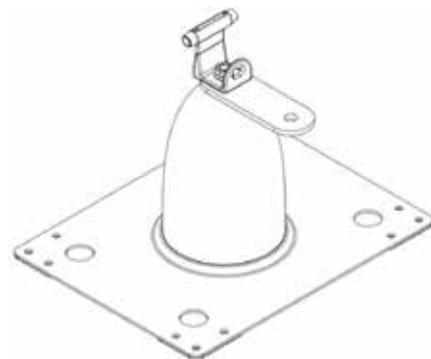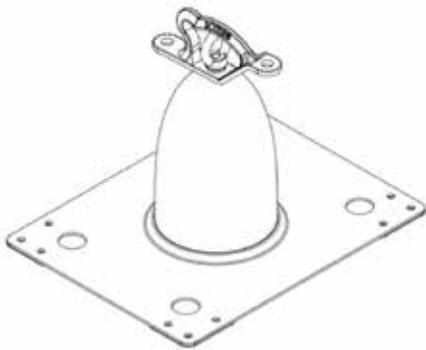

6.7 45 Degree Turns and Hip Details

Due to the unique way both our Slider attachment device and intermediate bracket are designed, a 45-degree turn can be created by using an intermediate bracket located on an intermediate post. If, however a system needs to turn 45 degrees twice in a line between 2 HL posts, therefore creating a 90-degree turn, which is often seen on trapezoidal roof sheets in hip details, one of these posts must be a High Load.

6.8 Crossing Ridges, Valleys, & Distance from End of Sheets

When a system is required to cross over either a ridge or valley detail it is important that the wire itself does not come in to contact with the capping at the ridge, and doesn't rise above knee height when meeting two slopes at a valley once tensioned.

At both ridges and eaves locations, and at the end of any sheet next to a roof edge/fall hazard, the post must be fitted inside a fixing line/purlin on metal sheet constructions.

Soter HLL Installation Manual

6.9 Systems to Standing Seam Roofs

Due to the construction methods of standing seam roofs, arrest systems using top fixed shock absorbing posts, are not suitable to these roof types. This includes all forms of standing seam where the sheet is not 'fixed' and is rolled or folded.

7.0 Installation

All Soter HLL installations should be carried out by trained personnel, competent in not only Soter HLL systems, but general roof and site safety.

7.1 Tool List

Detailed below are generic tools required for all Soter HLL roof system installation, followed by specific tools per roof type/application.

General

- Cordless drill
- 17mm spanner/wrench
- 19mm spanner/wrench
- 19mm extended socket with wrench
- 2 x pairs of mole/vice grips
- Marker pen
- Tape measure
- Knife
- Cembre 130kN Hydraulic swager/crimper
- Cembre Hydraulic wire cutters
- Strap wrench with 130mm diameter capability

Trapezoidal Roof Sheet Installation

- 8mm HSS drill bits
- Gesipa PowerBird battery riveter/HN-2 long arm riveter c/w small jaws and nosepiece

Standing Seam Roof Sheet

- Gesipa PowerBird battery riveter/HN-2 long arm riveter c/w small jaws and nosepiece
- 13mm spanner/wrench
- 13mm hex socket driver for drill
- Allen keys and spanners (for S5 clamps)

Flat Roof Toggle Installation to Metal/Ply Decks

- 25mm auger bit
- 25mm bi-metal hole saws
- Arbour
- Arbour extension bar long enough to penetrate roof build up and deck
- 13mm hex socket driver for drill

Flat Roof Stud and Resin Installation to Concrete Decks

- SDS Hammer drill to suit build-up depth
- 25mm auger bit
- SDS masonry drill bit long enough to penetrate roof build up, screed, and embedment in deck.
- Wire brush
- Blow pump
- Resin applicator gun
- Hack saw/cutting disc/grinder
- File
- Hydrajaws pull test meter and plywood board/spreader plate for distributing load

Flat Roof BS Fastener and PA Sleeve to Metal and Ply Decks

- Torx extended drive bar
- Hammer





Flat Roof Concrete Screw to Concrete Decks

- SDS Hammer drill
- 25mm auger bit
- SDS masonry drill bit long enough to penetrate roof build up, screed, and embedment in deck.
- ZA1/4 M6 300/750 Drive Bar
- T25 M6 Torx Drive Bit
- Hack saw/cutting disc/grinder
- File
- Hydrajaws pull test meter and plywood board/spreader plate for distributing load

Soter HLL Installation Manual






7.2 Component List

Posts and Baseplates

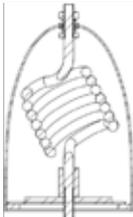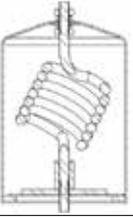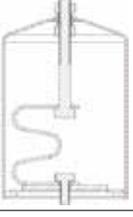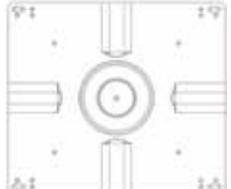SFS Code	Part #	Description	Image
S2 HL Can Assembly No Base FP-A-HLA	1520732	High Load Can Assembly M10 Stud Silver Washer	
S2 R Can Assembly No Base FP-A-IPA	1520733	Intermediate Can Assembly M12 Stud Red Washer	
S2 Flat Top HL Assembly No Base FP-FTA-HLA	1525902	Flat Top High Load Can Assembly M10 Stud Silver Washer	
S2 Flat Top R Assembly No Base FP-FTA-IPA	1525903	Flat Top Intermediate Can Assembly M12 Stud Red Washer	
S2 Standard Base 270x360 FP-BP-S	1501125	Standard Base Plate	
S2 Universe Base 437x385 FP-BP-U	1520734	Universal Base Plate	
S2 Flat Base 270x360 FP-BP-FC	1501163	Flat Base Plate PVC Coated	

Soter HLL Installation Manual



Posts and Baseplates

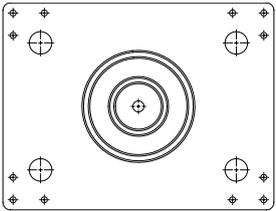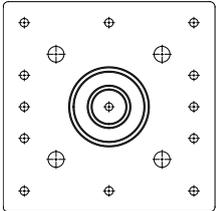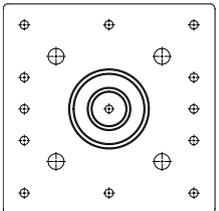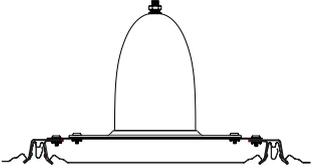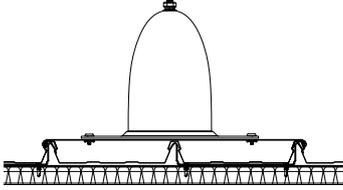SFS Code	Part #	Description	Image
S2 Flat Uncoated 270x360 FP-BP-FU	1501165	Flat Base Plate Uncoated	
S2 ISO-TAK Flat Base PVC FP-BP-NC	1555102	ISO-TAK Flat Base Plate PVC Coated	
S2 ISO-TAK Flat Base Uncoated FP-BP-NU	1555103	ISO-TAK Flat Base Uncoated	
Pendulum M12 Ring Post FP-AC-PP	1501129	M12 Ring Standard Base Pendulum Post with Karabiner	
Coated Rivertherm Base Set FP-BS-RT500	1501127	Pair of Coated Rivertherm 500 Legs	
Coated Speeddeck 510 FP-BS-SD510	1501128	Pair of 6 Hole Cranked 510 Legs Speeddeck	
Rivertherm Clip Set FP-AC-RC	1501166	4x2 PC Rivertherm Clips	

Soter HLL Installation Manual




7.2 Component List

Posts and Baseplates

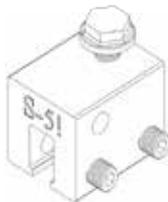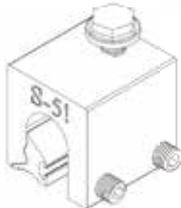SFS Code	Part #	Description	Image
S5-U-Clamp FP-AC-2S5	1501167	S5-U 2 Grub Clamp for Folded Roof	
S5-U-Mini-Clamp FP-AC-1S5	1501168	S5 Mini Single Grub For Folded Roof	
S5-Z-Clamp FP-AC-SC-M10	1501169	M10 Bolt Type ALI Standing Seam (KZ)	
Seam Clamp Base Set FP-AC-SA	1501170	Set of 4 Soter Standing Seam Attachments	
Toggle 150/200/250/300/ 350/450/500 FP-AC-TB-150-500	1501171 1501172 1501174 1501176 1501178 1501179	M8 Toggle Bolt 150-500mm 4 per base	
Toggle Cup 28x8	1501180	Toggle Cups 28x8mm 4 per base	
Universal End Anchor FP-A-UA	1501189	Universal End Anchor	

Soter HLL Installation Manual





Posts and Baseplates

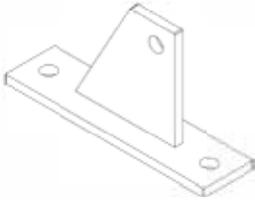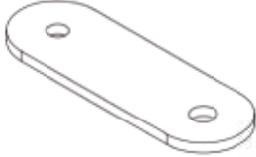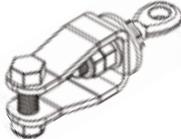SFS Code	Part #	Description	Image
Shark Fin FP-A-SF	1501190	Shark Fin End Anchor	
2 Hole Plate FP-CP-2H	1501201	Connector Plate 2 Holes M10/M12	
3 Hole Plate FP-CP-3H	1501202	Connector Plate 3 Holes M10/M12	
3 Hole Corner FP-CP-90	1501203	Connector Plate 90 degree 3 Holes	
Combined Tension Indicator FP-LT-D	1501205	Line Tensioner with Indicating Disc	
Line Tensioner FP-LT	1501206	Line Tensioner only	
Tension Indicator FP-LT-V-TI	1501208	Visual Tension Indicator	

Soter HLL Installation Manual




7.2 Component List

Posts and Baseplates

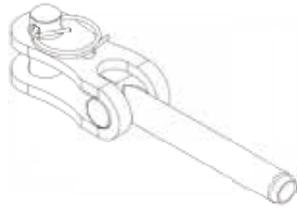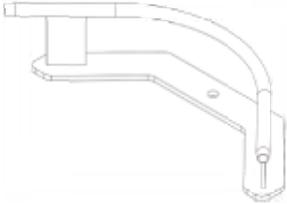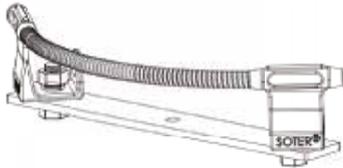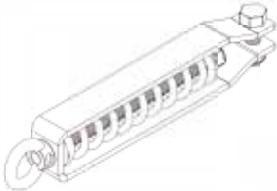SFS Code	Part #	Description	Image
Toggle Fork End FP-AC-TF	1520785	Toggle Fork Cable End	
Intermediate Bracket FP-IB	1501210	Intermediate Bracket	
Solid Corner FP-CK-90	1501222	Full 90 degree Fixed Corner	
Corner Kit Complete FP-CK-ADJ	1501223	Adjustable Corner Kit	
Shock Absorber FP-SA	1501224	Shock Absorber	
Female M10 Ring FP-FR-M10	1501227	M10 Female Eye Ring	
Female M12 Ring FP-FR-M12	1501228	M12 Female Eye Ring	

Soter HLL Installation Manual

Posts and Baseplates

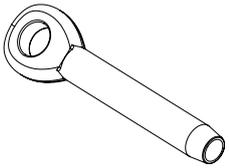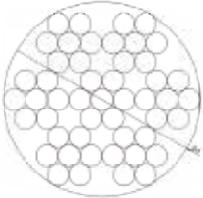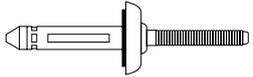
SFS Code	Part #	Description	Image
Strop End Eye FP-AC-EY	1501249	Strop End Eye	
Swage Joint Sleeve FP-AC-CJ	1501252	Joint Sleeve for Cable Joining	
Wire Cable FP-AC-C-8	1501253	S/S 7x7 8mm Wire Cable	
6605-9-6W FP-AC-BTR	1501254	Bulbtite Rivet 6605-9-6W	
Slyder Device FP-PP-LA	1501268	LIne Attachment Device	

Soter HLL Installation Manual


7.3 Post Installation

7.3.1 Flat Roof


7.3.1.1. Flat Roof Gravity Toggle to Metal and Ply/OSB Decks

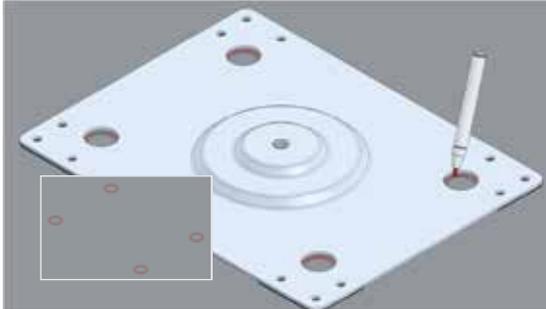

1. Ascertain location of base plate on membrane and mark 4 no. toggle fixing positions.

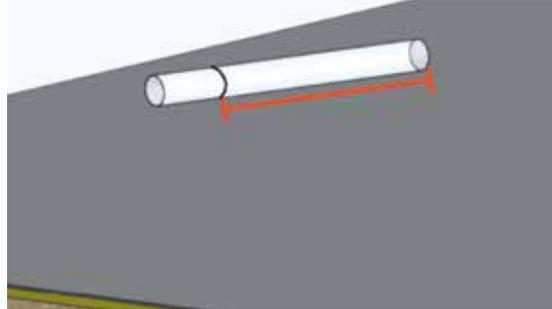


5. Measure, mark, and cut toggle tubes based on roof build up depth if used.

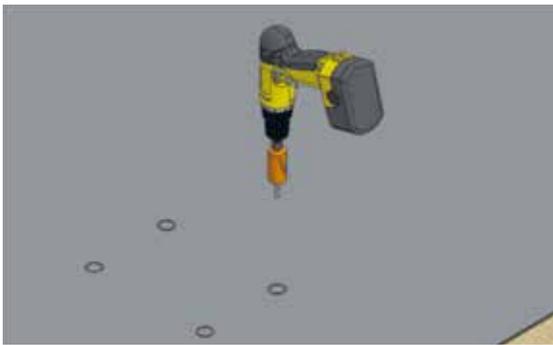


2. Using a 25mm diameter hole saw suitable for the deck construction, drill through the insulation and deck in all four locations.

3. Ensure all four fixing holes have been drilled through the total roof build up and are clear, clearing any debris away.

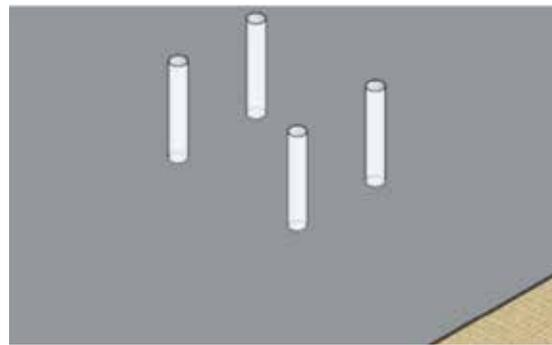

6. Insert toggle tubes into 4 no. holes and push down fully

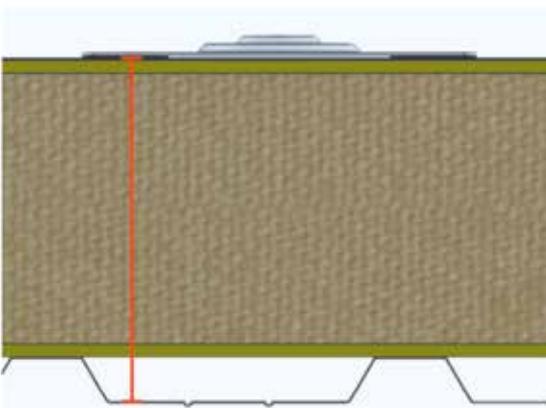


4. Measure the depth of the roof build up and ensure you have the correct toggle length. Toggles require an additional **80mm** in length to deploy fully.




7. Wind enough thread through the toggle barrel so that the toggle catches when deployed, re-set the toggle parallel to the toggle stud.

Soter HLL Installation Manual

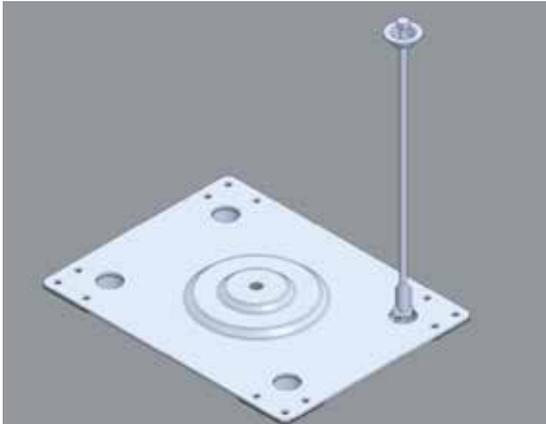


8. Insert toggle with care through base plate and drilled hole in roof, ensuring the toggle doesn't deploy until it has cleared the deck. Using toggle tubes prevents early deployment within the roof build up.

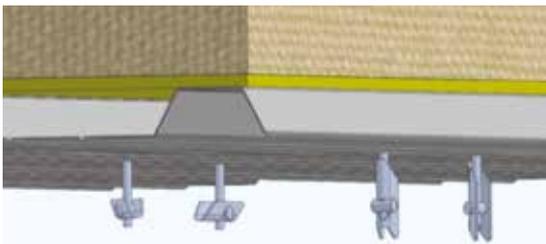

9. Once the toggle has dropped through the roof construction the toggle will deploy, this can be aided by shaking the post and stud slightly

10. When fully deployed, pull the toggle upwards so that it is tight against the deck, this will confirm the toggle is deployed or not.


11. Repeat steps 6-9 for the remaining toggles.

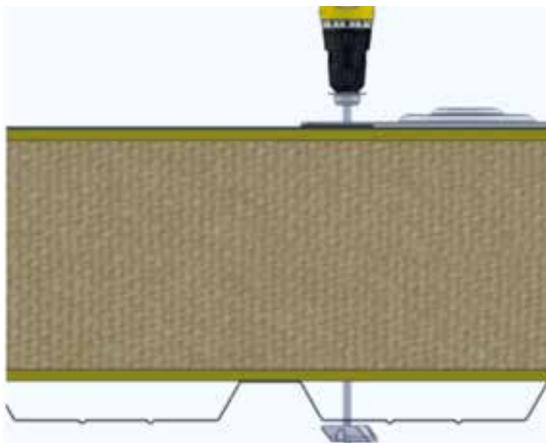



12. Once all four toggles have been deployed, pull, and hold the toggle whilst driving the nut with a battery powered drill and 13mm hex driver until the plate is pulled tightly to the membrane.



13. This will lock the toggle fully as shown. Repeat until all four toggles are tightened down slightly depressing the base plate into the membrane.

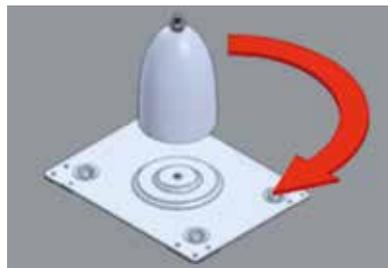


14. Turn Soter can onto female boss in base plate by hand firstly then to the desired tightness with Soter strap wrench tool until post is seated correctly.

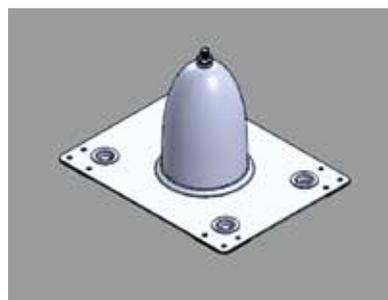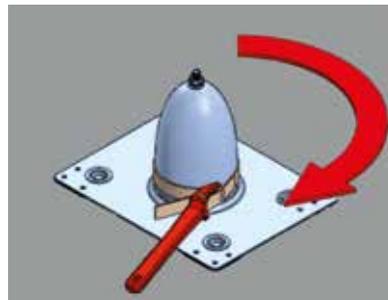

15. Anchor installation is complete and is ready for Soter components to be secured.

Soter HLL Installation Manual

7.3.1.2. Flat Roof Stud and Resin to Concrete Decks

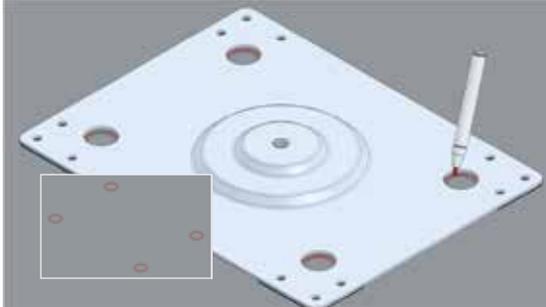


1. Ascertain location of base plate on membrane and mark 4 no. fixing positions.





2. Using a hole saw or auger bit, drill through the insulation in all four locations.



3. Ensure all four fixing holes have been drilled through the insulation and are clear, clearing any debris away.

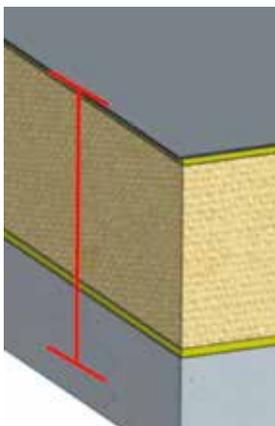


4. Ensure you have the correct stud length for the total build up depth, embedment into the substrate and enough protruding from the opening to fit a nut and washer.

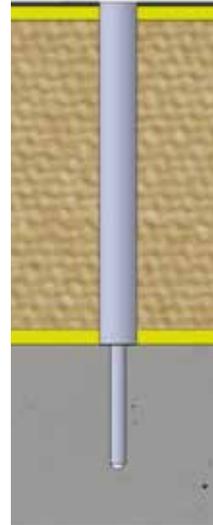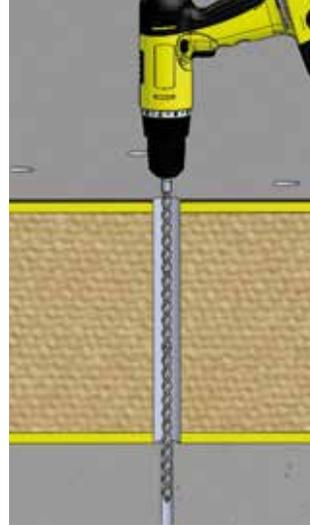

5. Using a SDS Masonry Drill and specified diameter drill bit, drill 4 no. holes into the concrete deck to give the required fixing embedment. If screed is present above concrete deck, remove this first using a larger drill diameter ensuring correct fixing embedment is in concrete substrate ONLY.

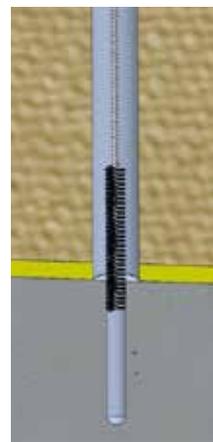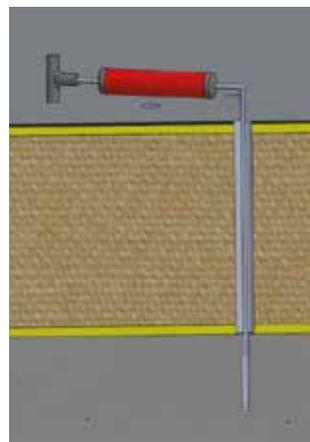


6. Using a wire brush and blow pump remove all debris remaining in each of the four holes.

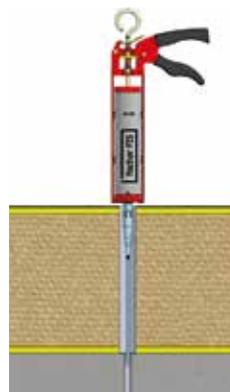

7. Prepare Fischer Vinyl ester resin tube, nozzle, and gun ready for application. Extrude enough resin through the tube on a scrap test area ensuring the 2 chemical parts are correctly mixed.

8. Once the resin is prepared squeeze resin through hole into substrate, slowly retracting the nozzle as the hole fills until 2/3 full. Do this for all four fixing locations.


Soter HLL Installation Manual

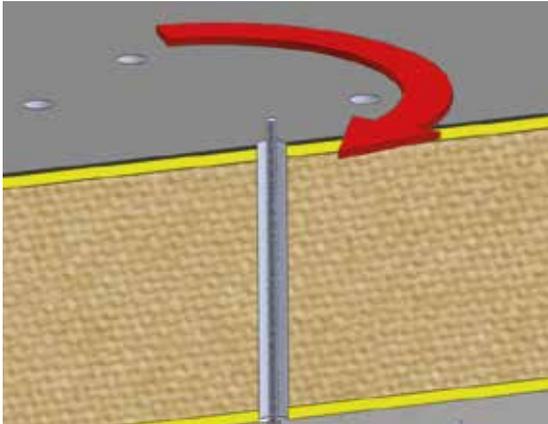


9. Before resin begins to cure insert studding gently into the hole turning the stud as you push it into the resin until the stud is fully inserted. Do this for all four fixings.




10. Allow for resin to cure based on temperature/conditions on site. See tube for indicative curing and setting times.

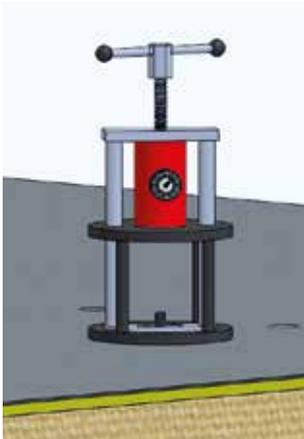

11. Once cured test each fixing with a pull test metre to 6kN using a spreader plate if required.

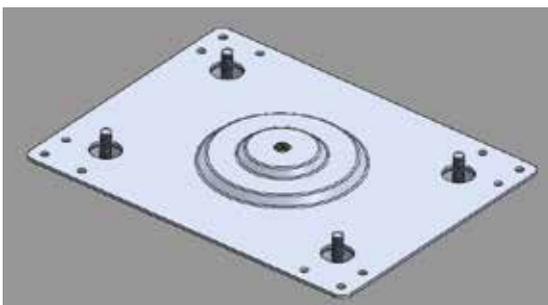


12. Drop base plate into position over protruding studs.


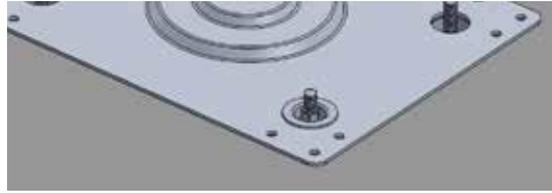


13. Place toggle cups over protruding studs above base plate for each of the four studs per post.


14. Add the nut to each fixing and tighten until base plate depresses into the membrane slightly.

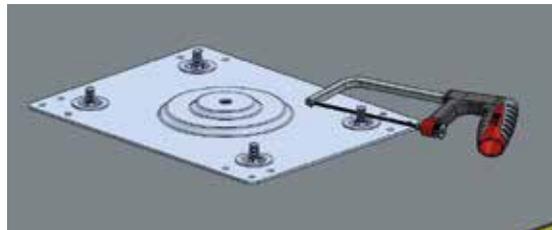

15. Cut off any excess studding and file down until smooth to avoid penetration through roof membrane, once laid.

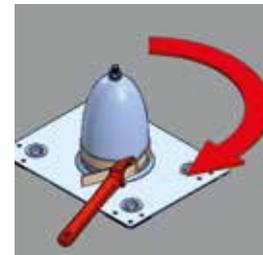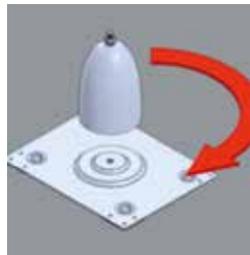


16. Turn S2 can onto female boss in base plate by hand firstly then to the desired tightness with Soter strap wrench tool until post is seated correctly.

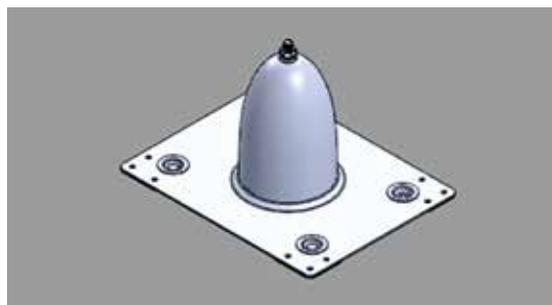


17. Anchor installation is complete and is ready for Soter components to be secured.

Soter HLL Installation Manual


7.3.1.3. Flat Roof PA Sleeve and BS Fastener to Metal and Ply/OSB Decks

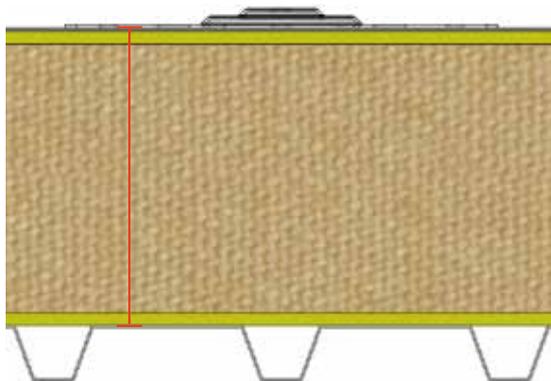


1. Ascertain location of base plate picking up the crown or trough of the deck based on the fixing length supplied.

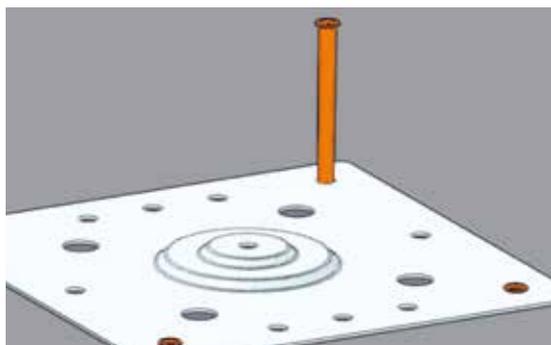


2.

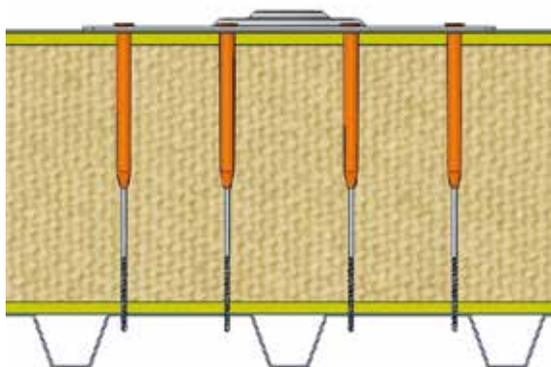

3. Take drill fitted with extended drive bar and T25 Torx bit and fix all 8 no. fasteners through tubes, insulation build up and deck, securing firmly. **DO NOT OVERDRIVE.**

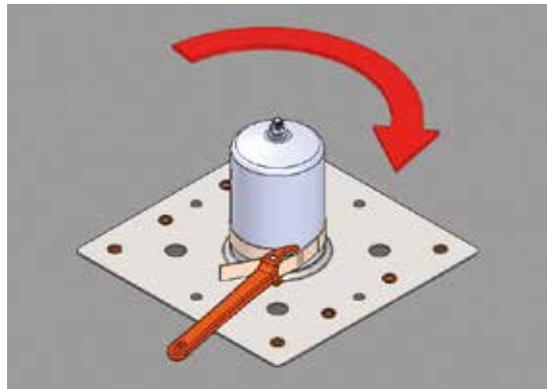


4. With all 8 fixings installed turn S2 can onto female boss in base plate by hand firstly then to the desired tightness with Soter strap wrench tool until post is seated correctly.

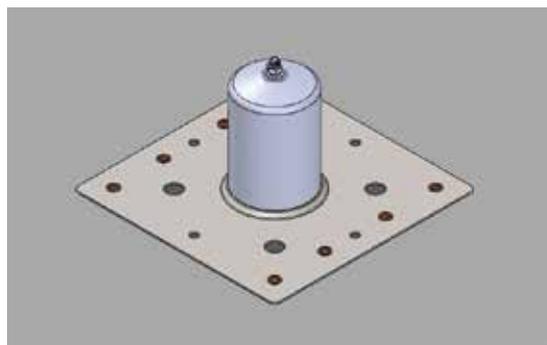

5. Anchor installation is complete and is ready for Soter components to be secured.

Soter HLL Installation Manual

7.3.1.4. Concrete Screw to Concrete Decks

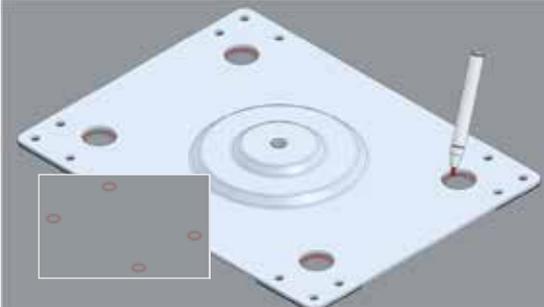


1. Ascertain location of base plate on membrane and mark 4 no. fixing positions.




2. Using a 14mm diameter hole saw or auger bit, drill through the insulation in 4 locations.


3. After removing insulation in all fixing holes clear any remaining debris away.

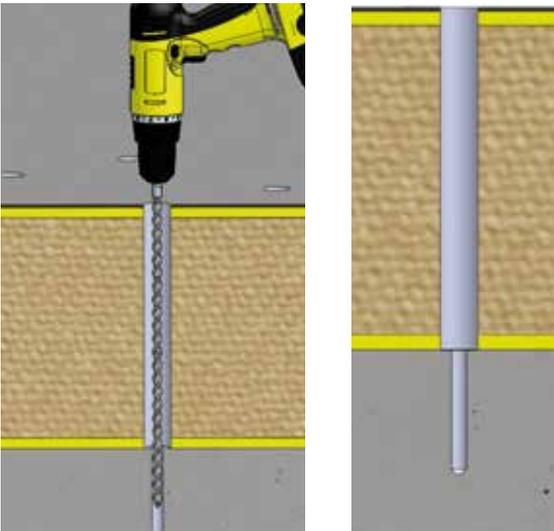

4. Using a 6mm SDS Masonry Drill and specified diameter drill bit, drill 4 no. holes into the concrete deck to give the required fixing embedment. If screed is present above concrete deck, remove this first using a larger drill diameter ensuring correct fixing embedment is in concrete substrate ONLY.

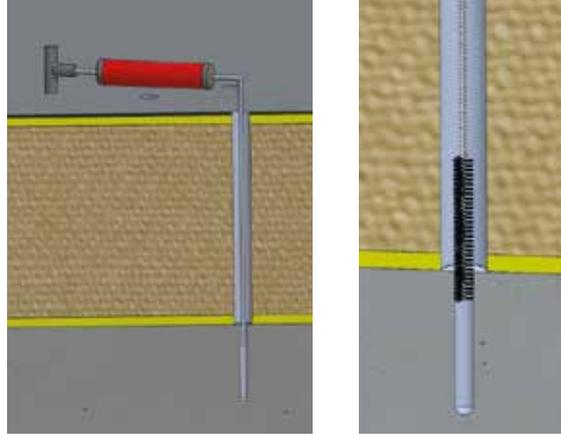


5. Using a wire brush and blow pump remove all debris remaining in each of the 4 holes.


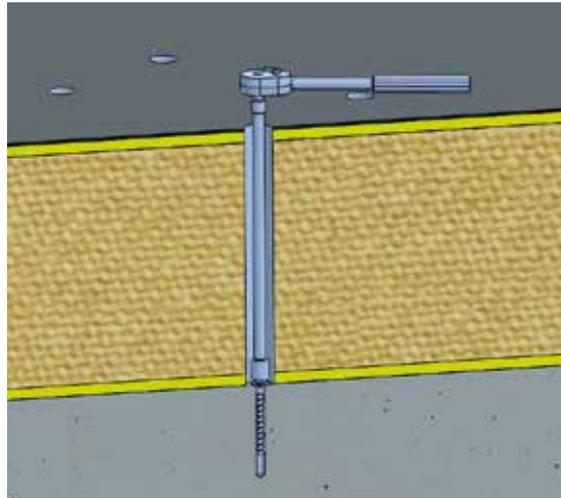


6. Using socket and extended drive bar fasten each of the screws into the concrete deck.


Soter HLL Installation Manual

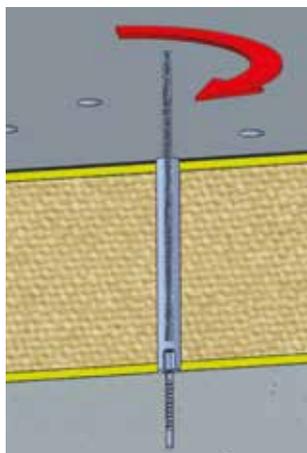

7. Turn studding into screw head of each fixing ensuring the correct stud length is used to allow enough to protrude from the opening to fit a nut and washer.

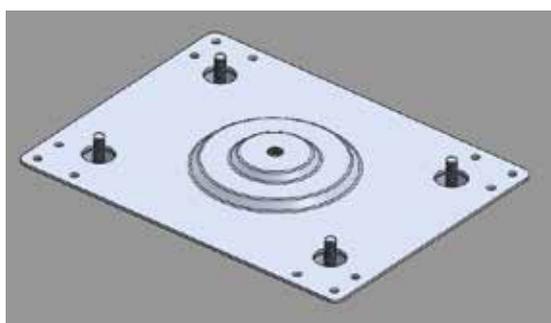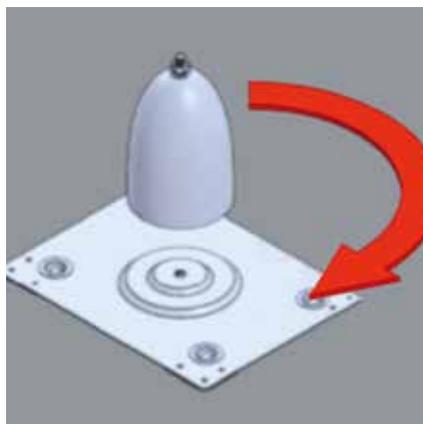

8. Drop base plate into position over protruding studs.

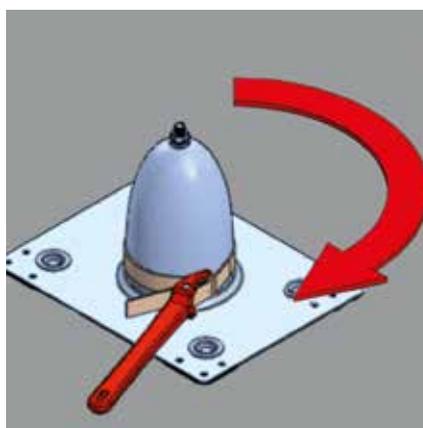


12. Turn S2 can onto female boss in base plate by hand firstly then to the desired tightness with Soter strap wrench tool until post is seated correctly.




9. Place toggle cups over protruding studs above base plate for each of the 4 studs per post.

10. Add the nut to each fixing and tighten until base plate depresses into the membrane slightly.

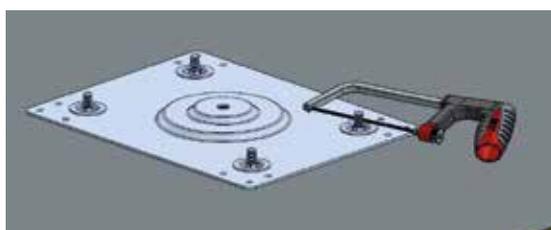


11. Cut off any excess studding and file down until smooth to avoid penetration through roof membrane.

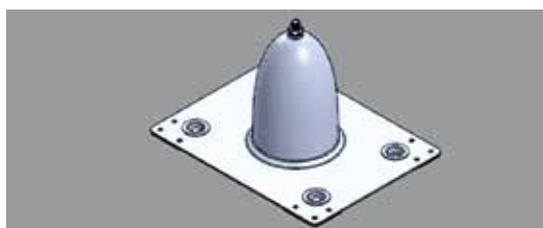


13. Anchor installation is complete and is ready for Soter components to be secured.

Soter HLL Installation Manual

7.3.2. Trapezoidal Roof Sheets

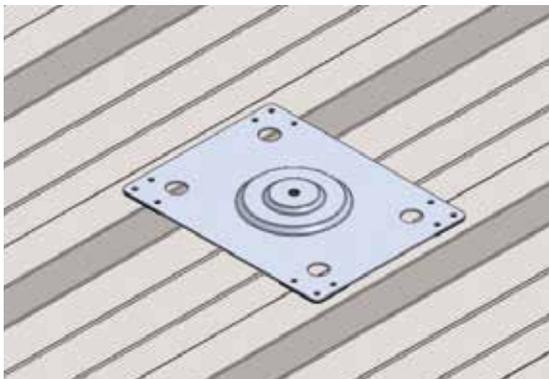


1. Ascertain location of base plate, ensuring the plate is positioned so that the correct fixing holes sit centrally to the crown centres of the sheet. Ensure roof sheet is properly cleaned prior to installation.

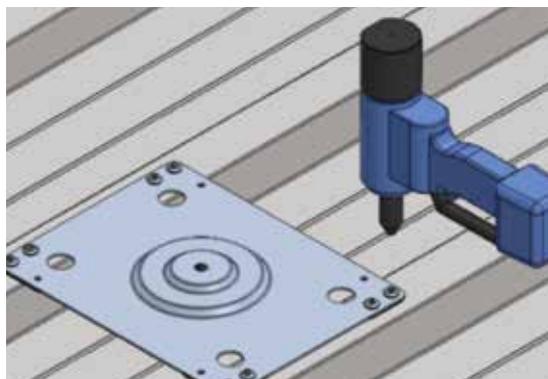

5. Repeat steps 2-4 on remaining fixing holes as per roof sheet specification and fixing number.





2. Once positioned drill first hole in corner of base plate using a 8mm drill bit.

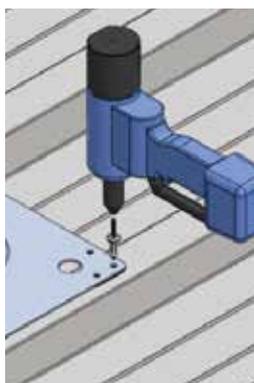


3. Insert rivet into drilled hole and using a PowerBird riveter pull the rivet fully ensuring the rivet mandrel is fully removed.



6. Turn S2 can onto female boss in base plate by hand firstly then to the desired tightness with Soter strap wrench tool until post is seated correctly.

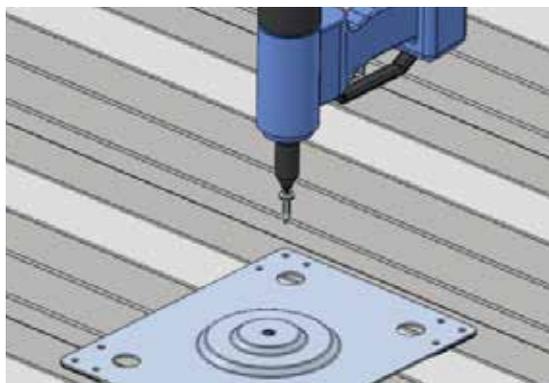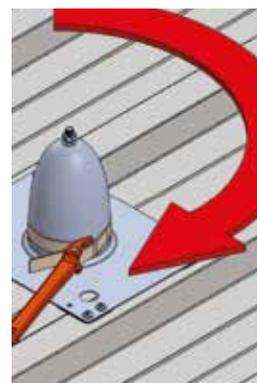


4. Drill and rivet the opposite corner.

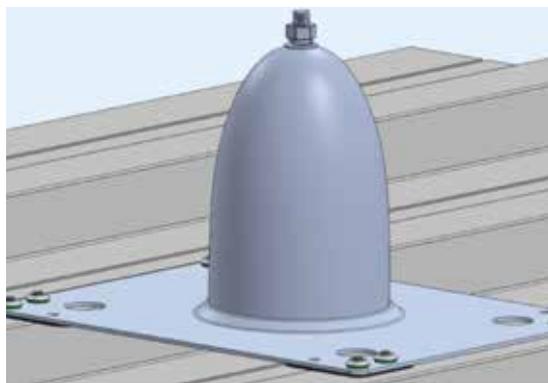


7. Anchor installation is complete and is ready for Soter components to be secured. Clean area fully removing any drill/rivet swarf.

Soter HLL Installation Manual


7.3.3. Standing Seam Roof Sheets

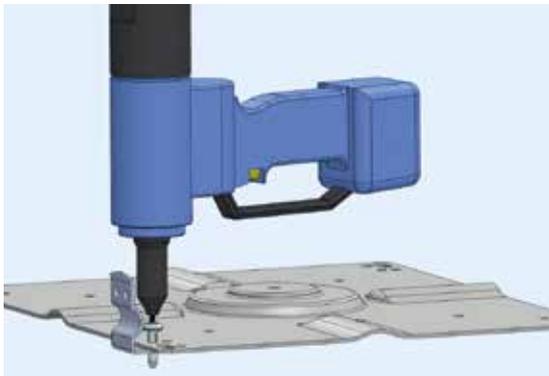


1. Ascertain location of base plate a minimum of 150mm from halter clips, ensuring the seam is correctly zipped/formed and not damaged, and cleaned prior to installation.

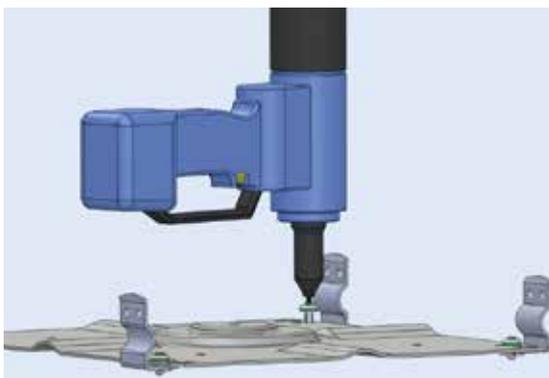



2. Rivet flanged part of Soter 2-part clamp to 4 corners of Soter base plate.

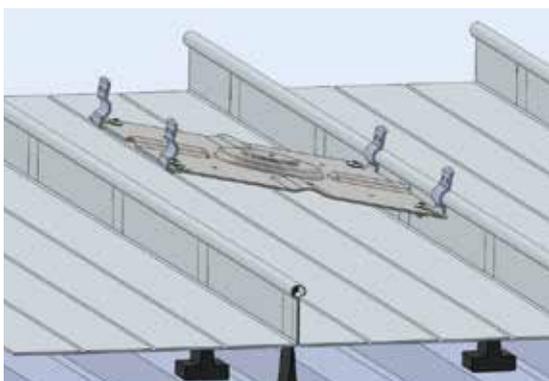

3. Once first part of Soter clamp is installed in all four corners, locate one side against the bulb seam and gently push the other side down to fit securely between the bulb-forms without damaging the sheet. By standing in each sheet pan to either side of the post will widen sheet pitch and aid installation.

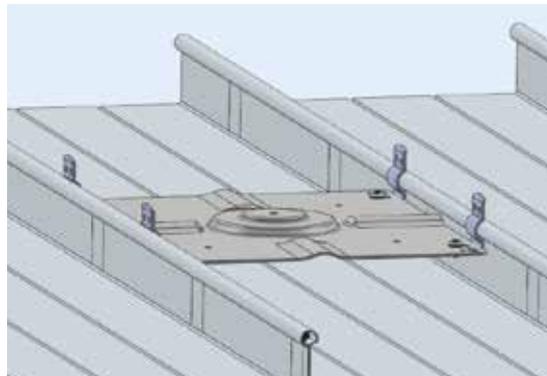


4. Once post sits between bulbs of sheet the second part of the Soter clamp can be fitted using nut bolt and washer sets. Torque each nbw set to 14Nm.

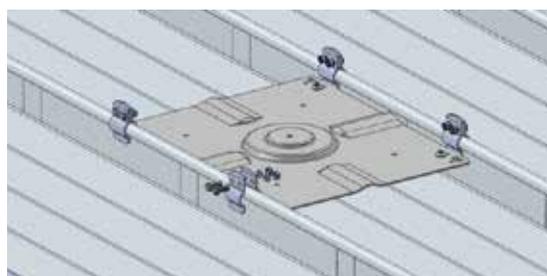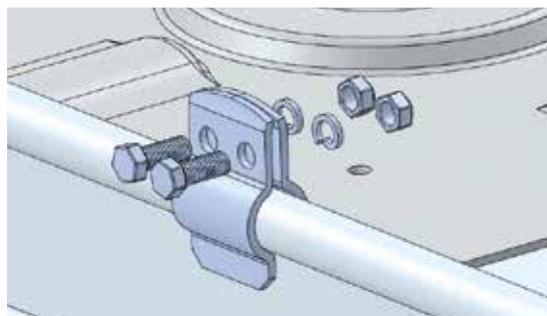


5. Repeat for remaining clamps.


Soter HLL Installation Manual

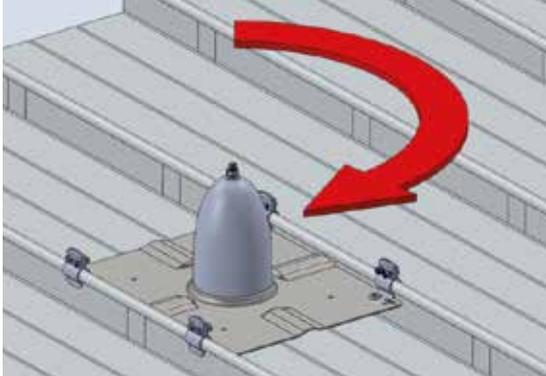

6. Turn S2 can onto female boss in base plate by hand firstly then to the desired tightness with Soter strap wrench tool until post is seated correctly.

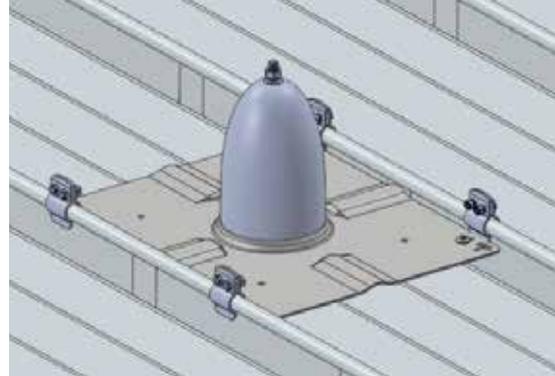

7. Anchor installation is complete and is ready for Soter components to be secured. Clean area fully removing any rivet swarf.

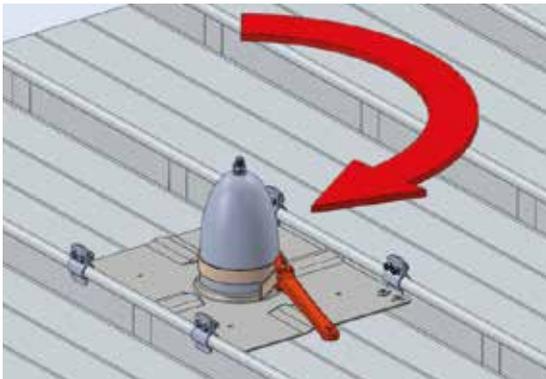

Soter HLL Installation Manual

7.4. Component Installation

Due to the unique way the Soter cans have been designed M10 & M12, the required component can only fit on the correct post type.



M10
3 Hole Corner Plate



Universal End Anchor



Female M10 Ring*



M10
3 Hole Plate



M10
Adjustable Corner Kit



M10
2 Hole Plate



M10 High Load
Start/Corner/End Post



M10
Solid Corner



Intermediate Bracket



M12 Intermediate/
Single Point Anchor



M12 Female Ring*

*Nut not required for female ring

Soter HLL Installation Manual

7.5. Wire Measure and Cutting

Before any accurate measurement can be made, the wire must first be loosely pulled from the start of the system, through every component fitted to posts to the end point.



To gain the most accurate measurement it is advised to swage/crimp the end termination and fix to the end post component. If the end termination is a line tensioner, ensure the tensioner is fully wound out prior to crimping. See section 7.6 on crimping/swaging.



Working back from the end of the line, and after every 3 or so posts on a straight run, or more frequently if the system turns, take a pair of mole/vice grips and manually pull the line (without overloading the end/corner post) and clamp the vice grips behind an intermediate bracket or corner kit.



As you reach the start of the line, you will have manually pulled the wire enough so that it doesn't touch the roof surface, and has reasonable tension in it. Doing this minimises the amount of tension you require the line tensioner to take up.

Specialist Tools required



Hydraulic wire cutter for 8mm stainless wire



130kN Hydraulic swager and die set for 8mm stainless wire

Soter HLL Installation Manual

Take the combined tensioner/line tensioner and fully unwind both ends from the central barrel first. Then wind both back in, two full turns. This maximises the amount of tension it can take up.



Fit the tensioner to the start component loosely, and whilst pulling the wire taught, mark the wire with a marker pen against the pressing on the tensioner. You can now cut the wire on the marking with the Cembre HT-TC026 hydraulic cutter. This will ensure the wire is cut correctly.



As the wire is now cut to the correct length, the tensioner can be removed from the start component ready for crimping/swaging.

7.6. Termination Swaging/Crimping



Insert the wire into the termination fully, and mark the wire at the end of the termination.



Remove the wire and place alongside the termination up to the point just marked.



Now mark on the termination where the wire ends. This shows where the hollow part of the termination ends, and where the first crimp will be located. This needs to be done on all terminations- tensioners and toggle fork ends.



Re-insert the wire fully ensuring the wire is fully engaged in the termination up to the point marked.

Soter HLL Installation Manual



Take the Cembre HT-131-C crimping tool and set the barrel to 'close'.



Position the central section of the die so that the first crimp is made next to the line marked on the termination itself.



During the first crimp ensure that the wire is held into position so that it doesn't slip. Pump the handle on the crimper until a distinctive 'click' is heard and pressure is released from the Crimper.



Turn the crimper barrel to 'open', pump the handle once to release the jaws.



Remove the termination and check that the crimp has been fully pressed and is stamped A10. This shows that the crimp has been properly performed and the die itself is not worn.



Moving down the termination, 4 more crimps need to be performed, ensuring there is a 1mm gap between each. It is also advised to turn the termination after each crimp so that they are not performed in the same plane which will prevent the termination from slightly bending.



All five crimps must be completed on the straight shank hollow section of the termination, and before the chamfered end. Each crimp should show the A10 stamp clearly and not overlap.



The termination has now been fully crimped and can be connected to the post by removing the pin/bolt and securing to the start/end post.



Soter HLL Installation Manual

7.7. Tensioning



Once the start termination has been fully crimped it can be properly secured onto the start component and the nut and bolt fully tightened.



By holding the crimped barrel and line in one hand the turnbuckle/central barrel of the tensioner can be turned tensioning the line with the other hand.



Once the required amount of tension has been achieved the red tension indicating disc will loosen and can be turned. Although this indicates the required amount of tension (0.8kN) has been achieved, it is the installers responsibility to check each straight-line span has enough tension in it and the tension is evenly distributed throughout the system.



The nuts on the tensioner can now be tightened against the turnbuckle, locking it in place.



Finally, all system components should be fully tightened down to each post, and a final walk of the system should be performed ensuring everything is secure and nothing has been missed.

Soter HLL Installation Manual

7.8. System Tagging

It is important that all installed systems are fitted with a certification tag at the point of access, similar to the tag shown opposite. Conforming to BS EN 365:2004

The certification tag should include the following information to support the more detailed O&M Manual:

- Contract number/name so that the system can be identified
- System type- Restraint/Arrest
- PPE Requirements for the user to use the system safely & correctly
- No. of persons the system is designed for
- Maximum lanyard length- imperative in work restraint systems
- Installation date
- Recertification/inspection due by date

If the recertification date has lapsed, the system **should not be used** until a recognised/approved Soter installer has recertified the system as fit for use.

Systems are required under EN795 to be recertified annually.



8.0 Annual Maintenance and Recertification

General Notes

Safety line systems must be inspected and re-certified at intervals not exceeding twelve months.

Horizontal line systems are affected by changes of temperature; this will result in expansion/contraction of the wire. Where systems are subject to significant seasonal temperature variations, these will require re-tensioning for summer and winter operation.

Only those components manufactured and supplied by SFS are permitted for use. The exceptions to this are bespoke fittings required to attach the system to particular structures. Wherever possible such bespoke fittings should be designed and manufactured by SFS, or their design approved. Where such bespoke fittings are provided from another source, it is the installer company's responsibility to ensure they are fit for the purpose intended and carry the necessary approvals.

Under no circumstances must a standard Soter component be modified or replaced by components from another source.

It is important that all Soter devices will align themselves correctly through all componentry; and that there are no obstructions or structures, that interfere with the Slider device, or deflect the wires path.

The structure to which Soter systems are to be installed should be sufficiently strong to withstand the fall arrest/restraint loadings for which the system is designed. These loadings can be calculated by the installer or provided by SFS. If there is any doubt as to the structure's ability to withstand such loadings, then the system should not be installed without appropriate testing on the substrate.

Inspection Procedure

VISUAL INSPECTION OF COMPLETE SYSTEM

- Check for obvious damage
- Chemical contamination
- Loose fittings
- Building modifications that have resulted in reduced free fall distance/clearance
- Post stability/lean
- Cable damage, paying particular attention to wire passing through any bracketry
- Excessively loose cable

CHECKING OF INDIVIDUAL COMPONENTS

High Load & Intermediate Posts

■ Check for visible damage

- If the inspector has any doubts as to the integrity of the post due to visible damage take the system out of use and consult SFS

■ Post lean

- It is possible that the lean is the result of overtightening at installation or from contraction of the wire due to temperature change post installation.
- Slacken the system and gently assist the post to return to its correct attitude, if successful re-tension the system.
- If post does not return to the perpendicular and there is no other evidence of system abuse the post may remain in situ
- It is acceptable for a post to lean up to 5° from the vertical providing the can is still secure.
- Where any doubt exists consult SFS

■ Rivets

- Visually seated correctly
- No mandrel is protruding from the rivet head
- The mandrel should however be visible within the body of the rivet

■ Standing seam clamps

- Soter Seam clamp torque setting 14Nm
- S 5 clamps base plate attachment bolt 20Nm, grub screws 15Nm

■ Components fitted to post secured with M10 or M12 nuts

- Components should be secure & tightened to 30Nm
- Damaged components should be replaced and a careful inspection of any wire passing through the damaged parts is required.

Soter HLL Installation Manual

■ Toggle bolts

- If underside of the deck/roof is visible check toggles are firmly secured with no movement and correctly engaged with the deck
- Toggles should not be tightened beyond 15Nm
- Non-exposed fixings, where the bolts are weathered in and inaccessible a tensile proof test is recommended to a sample 10% of the systems posts.
- The 10% should consist of ends, corners & intermediate posts.
- Due to the internal mechanics of the posts, test loads must not exceed 1.5kN (150Kg).
- Hold the load for 1 minute. Insulation and other roof build-ups can and do affect this process, so care must be taken to spread the load around the post to the roof surface using a spreader board/plate.

■ Structural Anchorages

- Posts secured to steel work/structures, M12 high tensile stainless steel bolts to 50Nm.
- Where Lindapter type clamps are used, follow the manufactures guide for torque settings
- Posts installed on concrete decks with resin or through fix anchor bolts must have each fixing point proof load tested to 6kN for 15 seconds at original installation.
- For recertification, it's recommended to test a sample 10% of the systems posts.
- The 10% should consist of ends, corners and intermediate posts

■ Wire

- 7x7 x 8mm Stainless Steel cable (minimum breaking load 38kN).
- SFS recommends that maximum in-line loads of 15kN should be targeted, this figure allows for a Factor of Safety of 2.3, based on the breaking strength of the cable.
- Visually examine cable, intermediate and end anchorages. The cable must be replaced if there are any signs of damage (kinks, fretting, etc.).
- All systems to be properly tensioned and as such must incorporate a SFS supplied line tensioner and tension disc indicator.
- Proper pretension is achieved when the line-tensioner disc just begins to freely rotate.

Never over tension a system!

■ Swaging

- Cable swaging should be accomplished by use of 6mm hexagonal form dies using 5 continuous 'bites'
- **Note:** the 6mm dimension refers to the width of each face. The across flat dimension, after swaging, is typically 11mm
- Testing swage joints is possible with specialist equipment from Hydrajaws Ltd. www.hydrajaws.co.uk or Tel. 01675 430370.
- Fittings should be tested to 15kN for 7x7 8mm stainless wire.
- Maintain the applied load for 1 minute and the release
- Thoroughly examine the following:
 - All swaged connections for 'slip'
 - All components for damage
 - End & Intermediate anchorages for damage/slip
 - The cable for damage
- Test all system terminations and in-line swaged joints
- Care must be taken when using cable grip devices, that damage to the cable does not occur and that there are no loads transmitted to the intermediate anchorages

9.0 Operation and Maintenance/ User Instructions

It is imperative that any safety line system, once installed, is accompanied by a full O&M, and user instruction manual. This manual should be given to the building owner.

Any operative who is to use the system should have access to this document, allowing them to understand how it can be used safely, but also kept in good condition, and re-certified at correct intervals.

O&M Manual should detail the following;

- Site location, building name, and roof reference/location of line.
- Installation certificate including installation date and re-certification due date.
- Contact details of approved company who installed the line.
- System layouts.
- The purpose or areas in which the system will allow access to.
- Recommended PPE to be worn.
- User equipment detailed ensuring safe use- most importantly lanyard lengths.
- System type, restraint/arrest.
- Rescue plan in event of a fall.
- Number of persons the system is designed for.
- Access point.
- Usage/record card.
- General safe use and good practice.
- Connection of travelling device.
- Inspection and maintenance records.

10.0 Warranty

All Soter FP products sold within the SFS group carry a standard 12 month 'fit for purpose' product warranty*

In cases where customers seek additional comfort, an extended warranty can be applied for*. This should be done by the system installer within the first 3 months of installation.

Warranty terms maybe 1-24 years, or even longer than this, subject to conditions and project specification.

A pre-contract questionnaire, covering building use & proximity to chemicals or coastal environments will be required.

All warranties are subject to the frequency of inspections and system re-certification by an approved Soter system installer.

The Soter SFS Warranty* covers all systems installed on trapezoidal roof profiles, standing seam, and flat roofs.

The Soter FP range is made from non-ferrous and stainless-steel components, it carries a design life which goes beyond that of the actual building.

Standard terms and conditions covered by our insurers is available on request.

*terms and conditions apply

11.0 Testing Standards

All Soter Fall protection products are tested to, and pass, all the relevant and recognised industry standards for each type. Soter HLL system passes EN795:2012 Type C and CEN/TS 16415:2013 Type C for up to 4 users. The Soter Slider travelling device also carries a CE mark.

All tests have been witnessed and certified by independent testing body SATRA. These tests have been carried out both at SFS's testing facility, and at SATRA's own facility.

We also test to ACR[M] 002:2009-(part2) testing of roof anchors on roof systems known as the Magenta test methods.

As we also recognise the up and coming BS8610 standard which requires all systems to be tested to the substrate it will be installed on, we are actively including the new standard in all our testing and development work.

12.0 References

BS EN 795:2012 Type C	Protection against falls from height Single User (anchor devices employing a flexible anchor line which deviates from the horizontal by not more than 15°)
PD CEN/TS 16415:2013 Type C	Protection against falls from height Multi user HLL (anchor devices employing a flexible anchor line which deviates from the horizontal by not more than 15°)
BS 7883: 2005	Code of practice for the design, selection, installation, use and maintenance of anchor devices conforming to BS EN 795
BS 8610:2016	Personal Fall Protection equipment anchor systems
ACR[M]002:2009-(Part2)	Magenta guidelines for roof anchors fitted to roofing systems
CE 0321 EN 795:1996 Class B	Travelling device CE marking
EN ISO 9227	Salt Spray Corrosion Test for CE
EN 361:2002	Full Body Safety Harness
EN 362:2002	Karabiners/connectors
EN 355:2002	Lanyard Shock Absorbers
BS EN 358	Personal protective equipment for work positioning and prevention of falls from a height - Belts and lanyards for work positioning or restraint
EN 354:2002	Fall Arrest Lanyards
BS EN 567	Aluminium rope grab device
BS EN 365:2004	Instructions for marking products with user instructions, inspection periods and re-testing.
ISO 9001	International standard that specifies requirements for a quality management system (QMS).

SFS:
Your strong partner



SFS is an international company with over 50 years experience of manufacturing innovative fastening systems. Our customers profit from:

- A solution oriented culture to create customer value
- In-house development and production in Europe, North America and Asia
- Exemplary process and technology competence
- Local presence linked to an international network

SFS: Assuring innovation and quality!

Technical advice and sales service

SFS Ltd.
Division Construction
153 Kirkstall Road
UK-Leeds, LS4 2AT

Tel +44 1924 472 251
Fax +44 1924 440 237
E sales@soterssafetysystems.com
www.soterssafetysystems.com
www.sfsintec.biz/uk



Version 1.0